LAUDA

Operating Instructions

LAUDA Compact Low-Temperature Thermostats
RC 6 CP, RC 20 CP, RC 25 CP, RL 6 CP
RK 8 CP, RK 8 KP, RK 20 KP

from series Z 01
software version 2.16
01/02
YACE0052

LAUDA DR. R. WOBSER
GMBH & CO. KG
P.O. Box 12 51
97912 Lauda-Königshofen
Tel: (+49) (0) 9343/ 503-0
Fax: (+49) (0) 9343/ 503-222
E-mail info @ lauda.de
Internet http://www.lauda.de

1 BRIEF OPERATING INSTRUCTIONS 6
1.1 Fitting the tubing to the pump connections: 6
1.2 Important: 7
1.3 Operating safety 7
1.4 Warning 7
2 TECHNICAL DATA TO DIN 58966 8
3 GENERAL CONSTRUCTION AND TECHNICAL DESCRIPTION 12
3.1 Operating principle 12
3.2 Materials 12
3.3 Pumps 12
3.4 Temperature control and electronics 13
3.5 Refrigeration system 14
3.6 Mains supply output 34 H 18
3.7 Remote operation (FBC) (option) 18
4 SAFETY DEVICES AND WARNING NOTES 19
4.1 Safety functions 19
4.2 Why can a thermostat be dangerous? 19
4.3 Important notes 20
4.4 Warning notes 20
4.4.1 Temperatures 20
4.4.2 Mains connection 20
4.4.3 Mains cable 20
4.4.4 Fume extraction 21
4.4.5 Cooling water, steam production 21
5 BATH LIQUIDS AND HOSE CONNECTIONS 22
5.1 Bath liquids 22
6 UNPACKING, ASSEMBLY AND SETTING UP 25
6.1 Unpacking 25
6.2 Setting up, operation as bath thermostat 25
7 CONNECTION OF EXTERNAL SYSTEMS 26
7.1 Closed external circuits 26
7.2 Open systems (baths) 26
7.2.1 Fitting the level controller 27
8 STARTING UP 28
8.1 Filling 28
8.2 Connection to supply 28

8.3 Basic functions 28
8.3.1 Supply switch-on 28
8.3.2 Standard display 28
8.3.3 Basic action on inputs and outputs 29
8.3.4 Overtemperature switch-off point 30
8.3.5 Low temperature switch-off point 31
8.3.6 Setpoint input 31

8.4 Parameter level PAR 32
8.4.1 Auto-adaptation 32
8.4.2 Output limitation 32
8.4.3 Display resolution L1 33
8.4.4 Contact input Fault 14 N 33
8.4.5 Baud rate RS 232 34
8.4.6 Menu language 34
8.4.7 Calibrating the analogue output channels 35

8.5 Calibration of the temperature measurement circuits 35

8.6 Control parameters 37
8.6.1 Indication and input of the control parameters 37
8.6.2 Recommendations for the control parameters 37
8.6.3 Bath temperature limitation 38
8.6.4 Correction limitation 38

8.7 External control 39
8.7.1 External measurement inputs and external controller 39
8.7.2 Start of external control 39
8.7.3 Notes 40

8.8 Operation with programmer 40
8.8.1 Programme input 41
8.8.2 Example of a programme 43
8.8.3 Programme test 44
8.8.4 Changing the programme data 44
8.8.5 Programme start, interruption and abort 44

8.9 Connection for analogue signals socket 52 S 45

8.10 Analogue inputs 46

8.11 Analogue outputs 48
8.11.1 Temperature signal channel 1 49
8.11.2 Temperature signal channel 2 50

8.12 Safety function 50
8.12.1 Low-level cut-out 51
8.12.2 Adjustable overtemperature limiter 51
8.12.3 Connection potential-free contact "Combined fault" 12 N (Alarm out) 52

8.13 Serial interface RS 232 C 53
8.13.1 Data of the RS 232 C interface 53
8.13.2 General principles 54
8.13.3 Output commands 54
8.13.4 Requesting data from the thermostat 56
8.13.5 Error messages on the computer 58

8.14 Timing clock function 58
8.14.1 Setting and indication of date and time 58
8.14.2 Timing clock function 59
8.14.3 Activating the timing function 59

9 MAINTENANCE 61

9.1 Safety notes in case of repairs 61
9.2 Repair and re-initilisation 61
9.3 Maintenance of the refrigeration system 62
9.4 Cleaning 62
9.5 Spares ordering 63

10 ACCESSORIES 64

1 Brief Operating Instructions

Even if you find these brief instructions initially sufficient please also read the following sections, especially Section 4: "Safety devices and warning notes".
For safe operation of the equipment it is essential that the information in these Operating Instructions is observed.

Check the thermostat and the accessories during unpacking for any transport damage and if necessary inform the carrier or the postal authority.

Assemble the unit according to Section 6 and add extra items as appropriate.

1.1 Fitting the tubing to the pump connections:

Without external system: for improved circulation within the bath remove the closing plugs from both of the pump connections, fit the tubing nipples and link them together with e.g. Perbunan tubing (up to 120°C) or better a metal tubing.

With external system: make tubing connections to the external system.

Protect the tubing with hose clips against slipping off.

Use only softened water or LAUDA bath liquids (Section 5). Fill up the bath to a level about 2 cm below the cover plate.

Check the supply voltage against the details on the label. Insert the mains plug.

Switch on the supply switch (green lamp lights up)

The display shows the software version and the type of the unit, followed by the standard display.

Select the required indications using the keys

and

in the SHIFT mode.
It is useful to show the setpoint (TS) in display line 2 (L2) (see Item 8.3.2).

Set the overtemperature switch-off point (TO) slightly above the operating temperature.

If there is an error message, press the key

and perhaps increase TO.

1.2 Important:

TO must be at least 25 K below the fire point of the bath liquid used (see Item 8.3.4)!

When connecting up an external system, check that filling this system does not cause the level inside the thermostat to fall more than is permitted.

When the thermostating liquid has reached the setpoint the symbol or starts to flash on the right in line 1 (L1) of the display.

After the unit has stabilised the bath temperature (Ti) corresponds to the setpoint (TS). If the refrigerating system has been out of use for some time it may take up to 20 minutes (depending on the ambient temperature and the type of the unit) until the rated cooling capacity is available.

1.3 Operating safety

The thermostat must be operated with non-flammable bath liquids or with flammable bath liquids up to 25°C below their fire point, otherwise there is the possibility that a flammable atmosphere may form (see Item 4.2).

1.4 Warning

Parts of the bath cover may reach temperatures above 70°C when working at higher temperatures. The outflow and return pipes of the pumps reach the operating temperature. Touching them is dangerous because of very high or low temperatures!

2 Technical data to DIN 58966

Type			**RC 6 CP**	**RC 20 CP**	**RC 25 CP**	**RL 6 CP**
Working temperature range		(°C)	-35...200	-35...200	-35...200	-80...100
Ambient temperature range		(°C)	5...40	5...40	5...40	5...40
Temperature setting/ resolution		(°C)	membrane keypad with 16 keys, setpoint input with 0.01°C resolution			
Bath temperature measurement			built-in digital thermometer with 0.01°C resolution, accuracy and stability of measurement (electronics without probe) better than 0.05% ± 0.05K *). Temperature probe Pt 100 to DIN IEC 751, Class B, can be calibrated additively at each measurement point.			
Display			back-lit LCD matrix display, 2 lines with 16 signs each, 10 mm character height			
External temperature measurement			2 separate temperature measurement circuits for external Pt 100 to DIN IEC 751 in 4-wire circuit, accuracy and stability of measurement better than 0.05 % ± 0.05 K *), can be calibrated additively at each measurement point. One probe produces the measurement for external control.			
Temperature control			modified PID controller with automatic structure selection. Control parameters through auto-adaptation or manual input. With external control a cascade controller operates on the measurement of one of the two external circuits (T1 or T2).			
Temperature variation at –10°C in the bath		(±°C)	0.01*)	0.01*)	0.02*)	0.02...0.05*)
Heater power		(kW)	2	2	2	1.2
Cooling			Proportional cooling with automatic compressor control			
Cooling capacity (eff.):	20°C	(KW)	0.3	0.3	0.3	0.46
(with ethanol at 20°C	0°C		0.24	0.24	0.24	0.38
ambient temperature)	–30°C		0.1	0.1	0.1	0.30
	–40°C		----	----	----	0.27
	–50°C		----	----	----	0.25
	–60°C		----	----	----	0.23
	–70°C		----	----	----	0.17
	–80°C		----	----	----	0.05
Safety system			Overtemperature protection with selectable switch-off point, low-level protection to EN 61010 FL (DIN 12879 class 2)			
Pump output against zero head						
Pressure/Suction		(l/min)	20/16	20/16	20/16	20/16
max. pump pressure		(bar)	0.32/0.25	0.32/0.25	0.32/0.25	0.32/0.25
Pump connections			M 16x1; nipples 13 Ø	M 16x1; nipples 13 Ø	M 16x1; nipples 13 Ø	M 16x1; nipples 13 Ø
Filling volume		(L)	4...6	10...14	19...27	4...6
Bath opening (W x D)		(mm)	150x130	300x175	300x350	120x105
Bath depth		(mm)	160	160	200	190
Usable liquid depth		(mm)	140	140	180	150
Height to top of bath		(mm)	450	450	575	540
Overall size (WxDxH)		(mm)	280x375x650	375x415x650	375x590x775	495x615x740
Weight		(Kg)	35	42	54	98
Supply		(V;Hz)	230;50 / 230;60 protection class 1 to VDE 106-1			
Loading (max.) without accessories		(kW)	2.4	2.5	2.5	2.5
Current take-up (max.) with accessories		(A)	14	15	15	16
Nominal current of fuses on customer's side (max.)		(A)	T 16 A	T 16 A	T 16 A	T 16 A
			Units are conform to EU Guideline 89/336/EWG (EMC) and 73/23/EWG (low-voltage) and carry the CE mark (230 V; 50 Hz)			
Cat.-No.						
230V; 50Hz			**LCK 171**	**LCK 173**	**LCK 175**	**LCK 183**
230V; 60Hz			**LCK 271**	**LCK 273**	**LCK 275**	**LCK 283**

Units of different power supplies have different heating capacities as well as different values for power consumption (see type lable).

Technical changes reserved!

*) see item 4.3

Type		**RK 8 CP**	**RK 8 KP**	**RK 20 KP**
Working temperature range	(°C)	-50...200	-45...200	-40...200
Ambient temperature range	(°C)	5...40	5...40	5...40
Temperature setting/ resolution	(°C)	membrane keypad with 16 keys, setpoint input with 0.01°C resolution		
Bath temperature measurement		built-in digital thermometer with 0.01°C resolution, accuracy and stability of measurement (electronics without probe) better than 0.05% ± 0.05K *). Temperature probe Pt 100 to DIN IEC 751, Class B, can be calibrated additively at each measurement point.		
Display		back-lit LCD matrix display, 2 lines with 16 signs each, 10 mm character height		
External temperature measurement		2 separate temperature measurement circuits for external Pt 100 to DIN IEC 751 in 4-wire circuit, accuracy and stability of measurement better than 0.05 % ± 0.05 K *), can be calibrated additively at each measurement point. One probe produces the measurement for external control.		
Temperature control		modified PID controller with automatic structure selection. Control parameters through auto-adaptation or manual input. With external control a cascade controller operates on the measurement of one of the two external circuits (T1 or T2).		
Temperature variation at –10°C in the bath	(±°C)	0.02*)	0.02*)	0.02*)
Heater power	(kW)	2	2	2
Cooling		Proportional cooling with automatic compressor control		
Cooling capacity (eff.): 20°C (with ethanol at 20°C 0°C ambient temperature) –30°C –40°C –50°C –60°C –70°C –80°C	(KW)	0.8 0.7 0.4 0.14 0.03 ---- ---- ----	0.8 0.7 0.4 0.12 ---- ---- ---- ----	0.8 0.7 0.4 0.12 ---- ---- ---- ----
Safety system		Overtemperature protection with selectable switch-off point, low-level protection to EN 61010 FL (DIN 12879 class 2)		
Pump output against zero head Pressure/Suction max. pump pressure	 (l/min) (bar)	 20/-- 0.3/--	 24/18 0.5/0.34	 24/18 0.5/0.34
Pump connections		M 16x1; Nipples 13 Ø	M 16x1; Nipples 13 Ø	M 16x1; Nipples 13 Ø
Filling volume	(L)	5.5...8	5.5...8	11...18
Bath opening (W x D)	(mm)	150x130	300x175	300x175
Bath depth	(mm)	200	200	200
Usable liquid depth	(mm)	180	180	180
Height to top of bath	(mm)	575	575	575
Overall size (WxDxH)	(mm)	400x500x775	400x500x775	400x500x775
Weight	(Kg)	62	62	62
Supply	(V;Hz)	230;50 / 230;60 protection class 1 to VDE 106		
Loading (max.) without accessories	(kW)	2.7	2.7	2.7
Current take-up (max.) with accessories	(A)	16	16	16
Nominal current of fuses on customer's side (max.)	(A)	T 16 A	T 16 A	T 16 A
		Units are conform to EU Guideline 89/336/EWG (EMC) and 73/23/EWG (low-voltage) and carry the CE mark (230 V; 50 Hz)		
Cat-No.				
230V; 50Hz		**LCK 177**	**LCK 179**	**LCK 181**
230V; 60Hz		**LCK 277**	**LCK 279**	**LCK 281**

Units of different power supplies have different heating capacities as well as different values for power consumption (see type lable).

Technical changes reserved!

*) see item 4.3

RC6CP

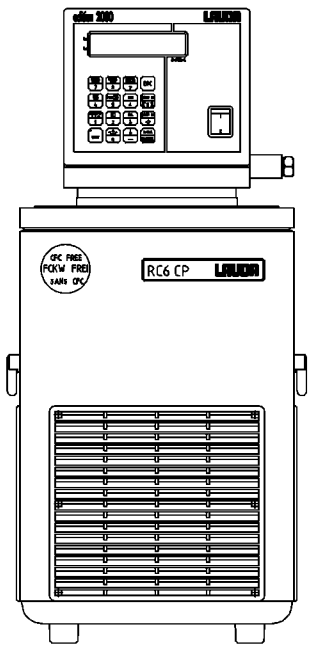

RC25CP

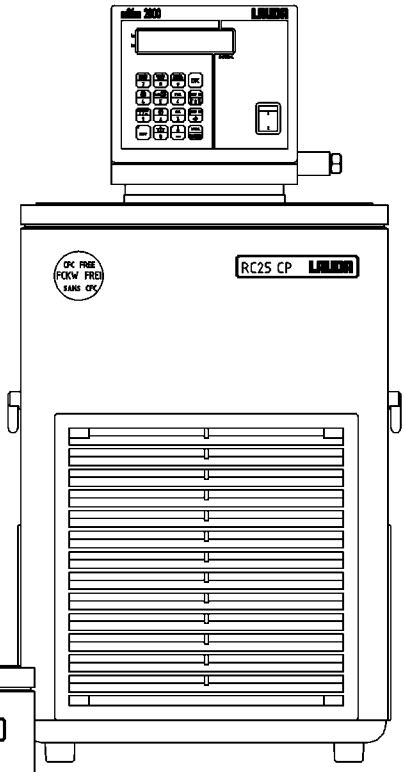

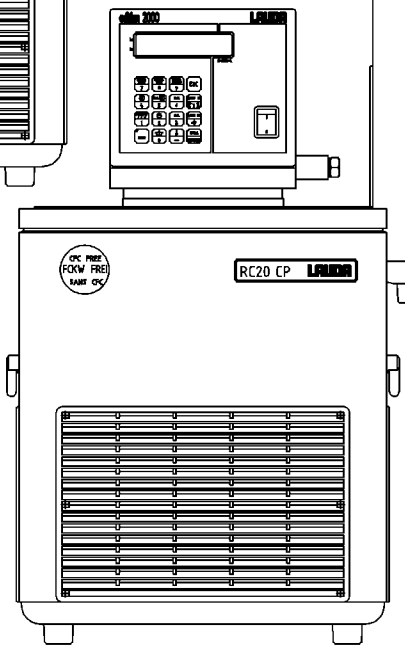

RC20CP

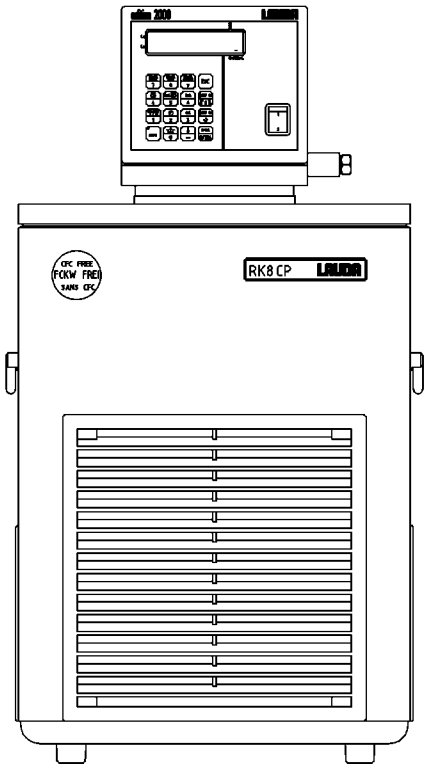

RK8CP/RK8KP/RK20KP

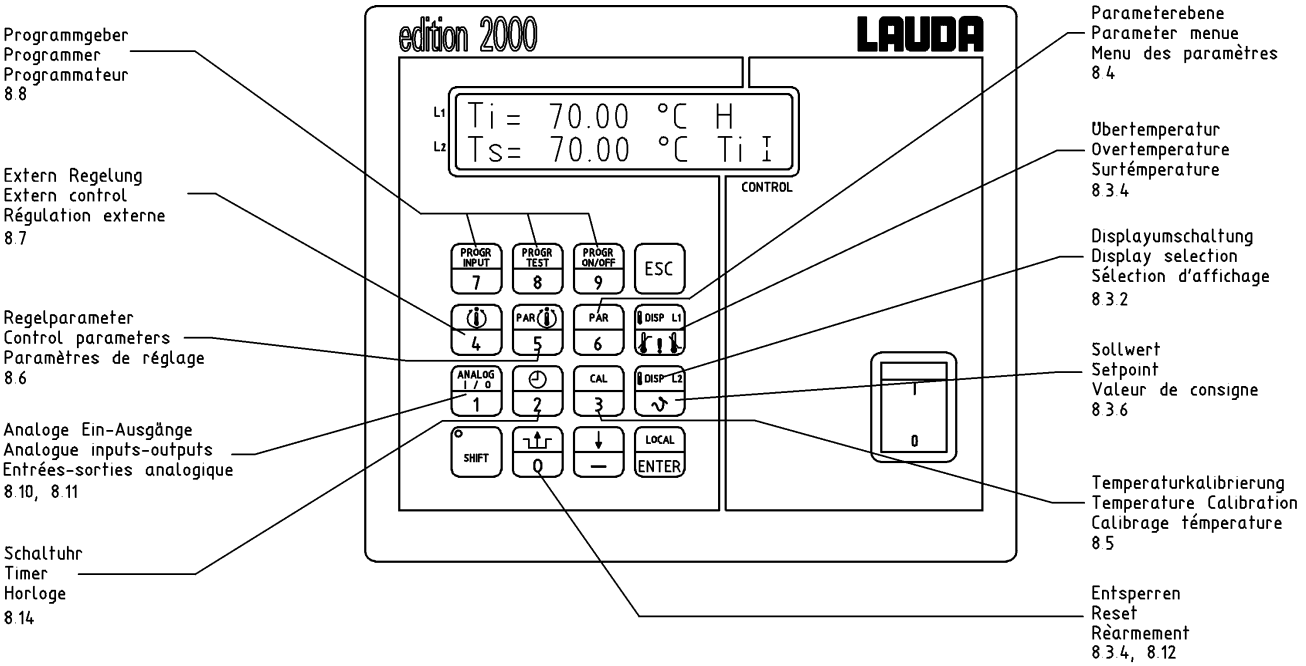
Programmgeber
Programmer
Programmateur
8.8
Extern Regelung
Extern control
Régulation externe
8.7
Regelparameter
Control parameters
Paramètres de réglage
8.6
Analoge Ein-Ausgänge
Analogue inputs-outputs
Entrées-sorties analogique
8.10, 8.11
Schaltuhr
Timer
Horloge
8.14
edition 2000
LAUDA
Ti= 70.00 °C H
Ts= 70.00 °C Ti I
CONTROL
PROGR INPUT
PROGR TEST
PROGR ON/OFF
ESC
PAR
DISP L1
DISP L2
ANALOG
CAL
SHIFT
LOCAL
ENTER
Parameterebene
Parameter menue
Menu des paramètres
8.4
Übertemperatur
Overtemperature
Surtémperature
8.3.4
Displayumschaltung
Display selection
Sélection d'affichage
8.3.2
Sollwert
Setpoint
Valeur de consigne
8.3.6
Temperaturkalibrierung
Temperature Calibration
Calibrage témperature
8.5
Entsperren
Reset
Rèarmement
8.3.4, 8.12

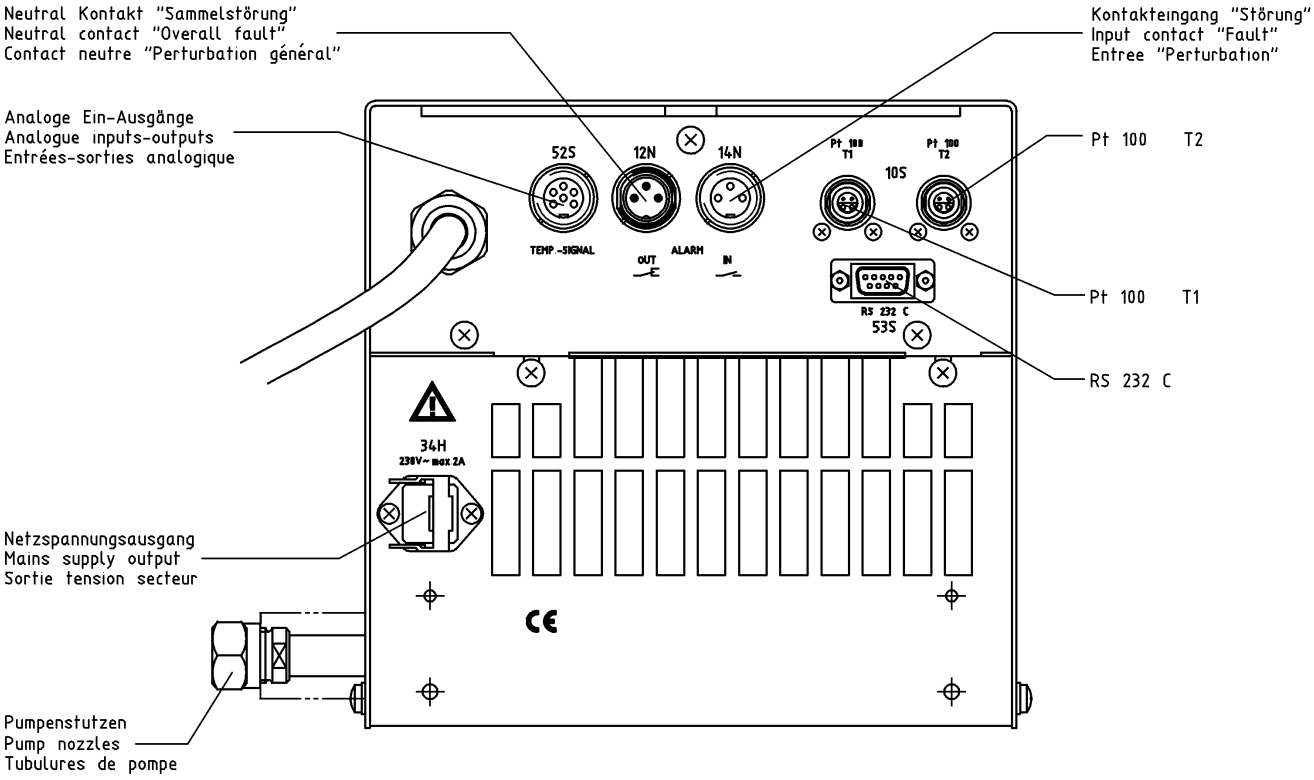
Neutral Kontakt "Sammelstörung"
Neutral contact "Overall fault"
Contact neutre "Perturbation général"
Analoge Ein-Ausgänge
Analogue inputs-outputs
Entrées-sorties analogique
Netzspannungsausgang
Mains supply output
Sortie tension secteur
Pumpenstutzen
Pump nozzles
Tubulures de pompe
52S
12N
14N
TEMP -SIGNAL
OUT
ALARM
IN
Pt 100 T1
Pt 100 T2
10S
RS 232 C
53S
34H
230V~ max 2A
CE
Kontakteingang "Störung"
Input contact "Fault"
Entree "Perturbation"
Pt 100 T2
Pt 100 T1
RS 232 C

3 General construction and technical description

3.1 Operating principle

The LAUDA bath/circulation thermostats Series RC, RL and RK with Electronics P differ in bath volume, bath depth, pump type and output as well as in cooling capacity and working temperature range.
Laboratory thermostats operate with liquids (operating medium, heat transfer oil) which serve for energy transfer to the product to be thermostated.

The thermostated products can be immersed in the thermostatic bath (bath thermostat) or placed in an external open bath whose liquid is circulated by the pump of the thermostat.

When operating as a circulator the thermostatic liquid is pumped through an external heat exchanger arranged by the user in which a product is being thermostated (jacketed vessels, reactors, heat exchangers).

3.2 Materials

All materials in contact with the bath liquid are made from rust-free stainless steel or materials of similar anti-corrosion properties. Materials of PTFE and PETP are also used in the thermostat Series RL.

3.3 Pumps

All units except Type RK 8 CP are equipped with a centrifugal pressure/suction pump. This can be used to operate both external open baths and closed external systems (reactors).

The immersion pumps are supplied in the two performance classes C and K.

The thermostat RK 8 CP is fitted with a pure pressure pump since this unit operates specially with closed external systems.

The pumps are driven by external-runner motors with a continuous shaft (except RL).

The pumps operate perfectly up to a viscosity of approx. 70 mm^2/s (RK 8 CP approx. 120 mm^2/s), with the pump output decreasing rapidly with increasing viscosity.

Pump characteristic
230 V/50 Hz

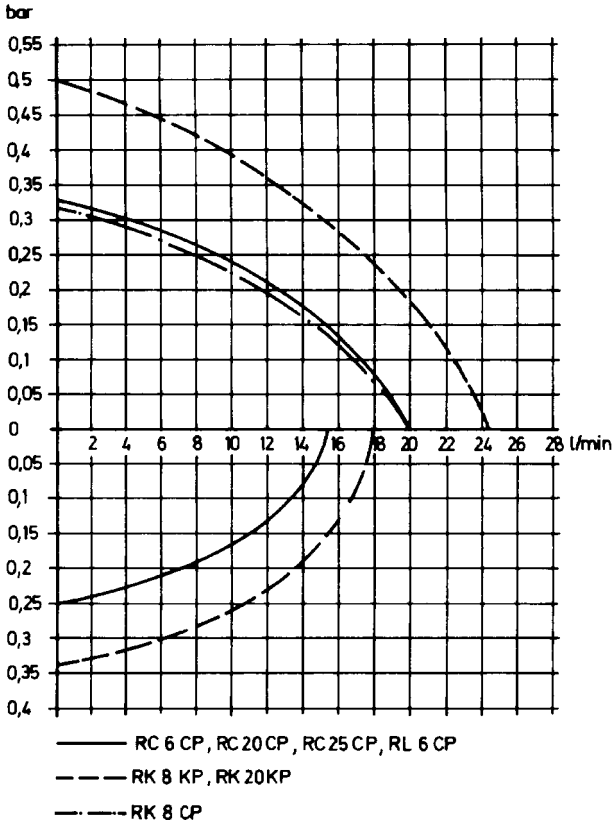

3.4 Temperature control and electronics

The units operate with a Pt 100 resistance thermometer for measuring the bath temperature (T_i). The bath temperature, all other temperature values and message signals as well as inputs are indicated as 2 x 16 characters, 10 mm high, on a liquid crystal display (LCD) with background illumination. The input of the setpoint (T_S) and all other parameters is made by using a membrane keypad with 16 keys and the operator guidance in the LCD display field. All inputs are stored even when the thermostat is switched off or if the supply fails.

The digitizing of the Pt 100 resistance signal is performed in the microprocessor by continuous comparison with the precision resistors. The secondary control using a modified PID control algorithm is purely digital. The tubular heating element for the heating of the bath is then operated electronically using a triac with burst firing action.

The tubular heaters have a surface loading of approx. 6 W/cm^2 . The silent solenoid valves necessary for the proportional cooling system are operated contactlessly via semiconducters.

3.5 Refrigeration system

The refrigeration system consists essentially of a hermetically sealed compressor. The condenser and motor heat are dissipated through a fan cooled finned tube condenser. Fresh air is drawn in at the front, heated and discharged at the back and the sides. To ensure a faultless air circulation the ventilation openings must not be restricted.

The compressors are fitted with a temperature monitor which responds to the compressor temperature and its current take-up. Additionally the cooling system is protected against overpressures by a pressure monitor.

The refrigerating units are operated by the automatic electronic compressor control. The LAUDA proportional cooling system controls the cooling capacity through solenoid valves with sound insulation, using the PID temperature controller. This ensures a minimum energy consumption and a minimum environmental warming on fully automatic operation over the entire working temperature range at different load conditions.

In thermostats of Series RL the refrigeration unit works as a two-circuit cascade with an electronic starting control of the low-temperature stage. Depending on the preceeding operation the low-temperature stage starts up between 10 sec and 20 min after the starting of the refrigeration unit.

At a bath temperature above 60°C the cooling capacity of the refrigeration unit is reduced in such a way that even a long-term operation "refrigeration" is possible.

Refrigeration circuit

RC

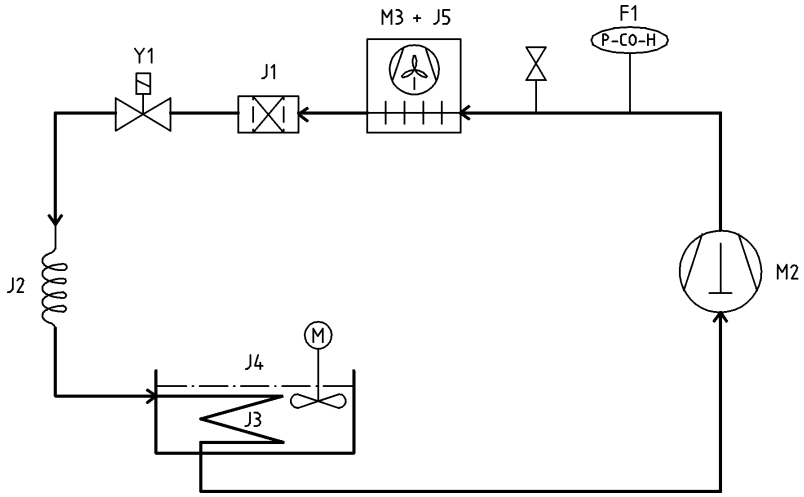

F1	Überdruckschalter	Overpressure switch	Disjoncteur de surpression
J1	Trockner	Drier	Secheur
J2	Kapillarrohr	Capillary	Tube capillaire
J3	Verdampfer	Evaporator	Evaporateur
J4	Flüssigkeitsbad	Liquid bath	Bain de liquid
J5	Verflüssiger	Condenser	Condensateur
M2	Verdichter	Compressor	Compresseur
M3	Ventilator	Fan	Ventilateur
Y1	Magnetventil Kühlen	Solenoid valve Cooling	Vanne solenoide refroidissement

RL

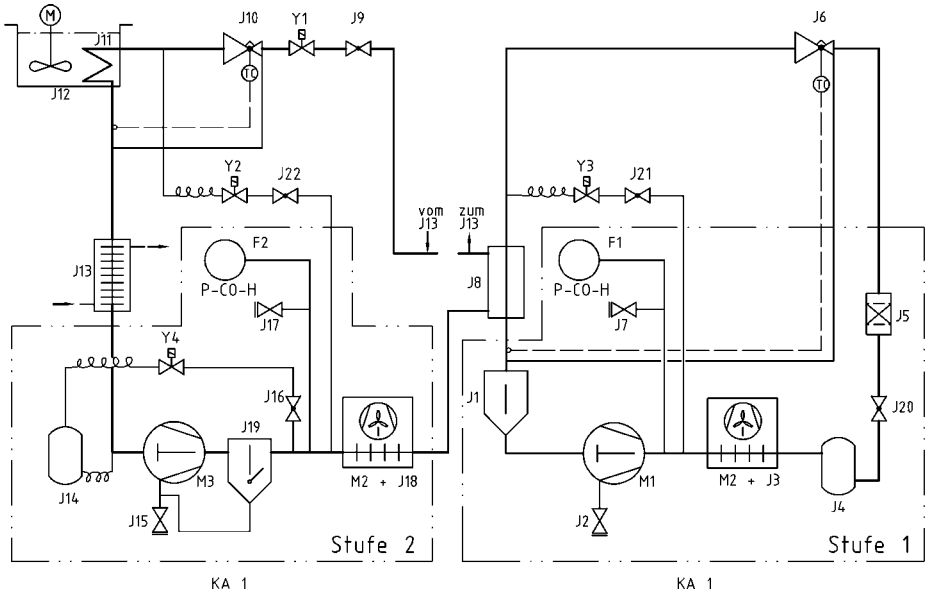

F1	Überdruckschalter Stufe 1	Overpressure switch stage 1	Disjoncteur de surpression étage 1
F2	Überdruckschalter Stufe 2	Overpressure switch stage 2	Disjoncteur de surpression étage 2
J1	Flüssigkeitsabscheider	Liquid separator	Separateur de liquide
J2	Kontrollventil Saug Stufe 1	Control valve suction stage 1	Vanne de contrôle aspiration étage 1
J3	Kondensator Stufe 1	Condenser stage 1	Condensateur étage 1
J4	Sammelflasche	Receiver	Receveur
J5	Filtertrockner	Filter drier	Déshydrateur
J6	Expansionsventil Stufe 1	Expansion valve stage 1	Vanne d’expansion étage 1
J7	Kontrollventil Druck Stufe 1	Control valve pressure stage 1	Vanne de contrôle pression étage 1
J8	Wärmetauscher	Heat exchanger	Echangeur thermique
J9, J16, J20,21,22	Absperrventil	Shut-off valve	Vanne d’arrêt
J10	Expansionsventil Stufe 2	Expansion valve stage 2	Vanne d’expansion étage 2
J11	Verdampfer	Exchanger	Echangeur
J12	Flüssigkeitsbad	Liquid bath	Bain de liquide
J13	Wärmetauscher	Heat exchanger	Echangeur thermique
J14	Druckausgleichsbehälter	Surge vessel	Réservoir d’égalisation de pression
J15	Kontrollventil Saug Stufe 2	Control valve suction stage 2	Vanne de contrôle aspiration étage 2
J17	Kontrollventil Druck Stufe 2	Control valve pressure stage 2	Vanne de contrôle pression étage 2
J18	Kondensator Stufe 2	Condenser stage 2	Condensateur étage 2
J19	Ölabscheider	Oil separator	Separateur d‘huile
M1	Kompressor Stufe 1	Compressor stage 1	Compresseur étage 1
M2	Ventilator	Fan	Ventilateur
M3	Kompressor Stufe 2	Compressor stage 2	Compresseur étage 2
Y1	Magnetventil Kühlen Stufe 2	Solenoid valve Cooling stage 2	Vanne solenoide réfroidissement étage 2
Y2	Magnetventil Heizen Stufe 2	Solenoid valve Heating stage 2	Vanne solenoide chauffage étage 2
Y3	Magnetventil Heizen Stufe 1	Solenoid valve Heating stage 1	Vanne solenoide chauffage étage 1
Y4	Magnetventil Druckausgleich	Solenoid valve pressure compensation	Vanne solenoide compensation de pression

RK

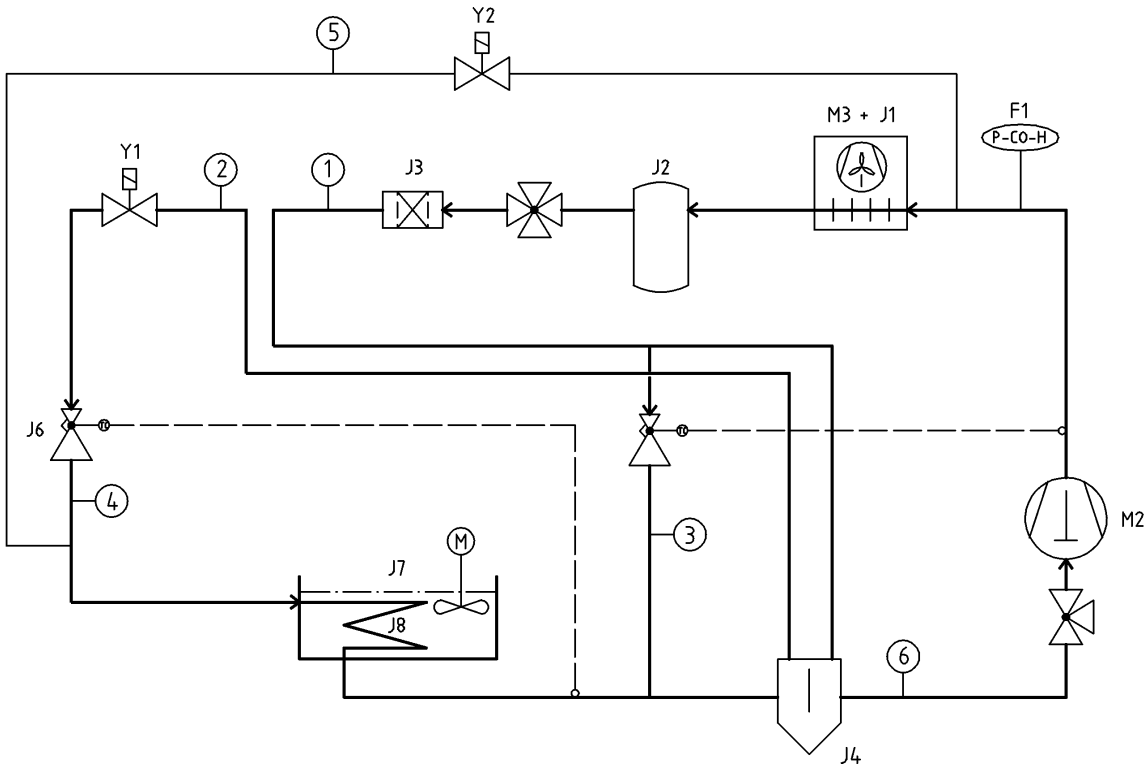

F1	Überdruckschalter	Overpressure switch	Disjoncteur de surpression
J1	Verflüssiger	Condenser	Condensateur
J2	Sammelflasche	Receiver	Receveur
J3	Trockner	Drier	Secheur
J4	Flüssigkeitsabscheider	Liquid separator	Separateur de liquide
J5	Nachspritzventil	Re-injection valve	Soupape de rè-injection
J6	Einspritzventil	Injection valve	Soupape d'injection
J7	Flüssigkeitsbad	Liquid bath	Bain de liquid
J8	Verdampfer	Evaporator	Evaporateur
M2	Verdichter	Compressor	Compresseur
M3	Ventilator	Fan	Ventilateur
Y1	Magnetventil Kühlen	Solenoid valve Cooling	Vanne solenoide refroidissement
Y2	Magnetventil Bypass	Solenoid valve Bypass	Vanne solenoide Bypass

Cooling diagram

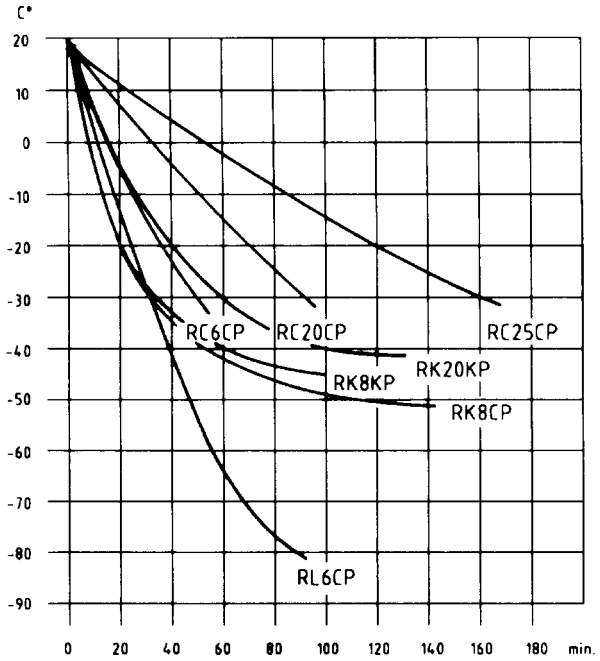

Bath liquid. Ethanol	Refrigerant	Time from Diagram
	Water-Glycol 1:1 (to -25°C)	= x1,7

3.6 Mains supply output 34 H

The 230 V supply voltage is available at the socket 34 H at the back in normal operation and with the unit switched on. The maximum current which can be drawn there is 4A with CP-units and 2A with KP-units. In case of a fault this supply is switched off. This output can be used e.g. to connect a non-return fitting (Cat. No. UD 125).

Suitable mating plug Cat. No. EQS 045

3.7 Remote operation (FBC) (option)

As an option the units can be converted to remote control; then the entire electronics with control panel is removed from the unit and used for remote operation. An adapter for the cable connections is required on the basic unit, and the control panel is placed in an extra housing. The conversion is to be carried out by a qualified electrician only. All necessary components except the connection cables are supplied as part of the kit.

Please specify the length of the connection cables. See accessories in the appendix.

4 Safety devices and warning notes

4.1 Safety functions

The built-in overtemperature limiter can be set over the complete operating temperature range.

The bath temperature is measured by a separate Pt 100 resistance sensor (T_{Si}) and processed by a separate analogue/digital converter. This measured value is compared with the measured value of the bath temperature probe (T_i) continuously. If the measurements differ by more than $\pm$15°C the thermostat switches off as in the case of a low-level or overtemperature fault.

The function of the microprocessor is monitored by an integrated watchdog circuit and an additional counter which operates similarly to a normal watchdog circuit but is also capable of switching off the unit in case of a strobe failure.

When the set overtemperature switch-off point (T_O) is exceeded the unit switches off permanently on all poles.

A float switch with magnetic coupling acts as a low-level cut-out and also switches off the unit (pump and heater) permanently on all poles.

In both fault conditions the display shows the corresponding message, and additionally an audible signal draws attention to the fault. The switch-off function of the safety circuit remains stored even during a break in the supply or after having switched off the supply.

Reset is possible by pressing the reset key , but only after having eliminated the troubles.

The pump motor is fitted with a temperature monitor which switches off if the motor winding overheats. The heater is also switched off simultaneously. After the motor winding has cooled down the pump starts up automatically.

4.2 Why can a thermostat be dangerous?

1. Thermostats are equipped with heaters supplying the necessary heat to the thermostating liquid. If the temperature control fails or if the liquid level is too low, the heater may reach temperatures which can lead to a fire in the laboratory, especially in combination with flammable liquids.

2. When using the thermostat as a circulation thermostat a hose may break, causing hot liquid to spill and endangering people and goods.

The safety requirements on thermostats therefore depend on whether

- non-flammable or flammable liquids are used
- operation is with or without supervision.

The thermostats described in these Operating Instructions are protected against overtemperature and low liquid level when operated according to the regulations (FL).

The units can be operated with non-flammable bath liquids and with flammable bath liquids up to 25°C below their fire point (EN 61010) on condition that there is correct adjustment and regular testing (see Item 8.12) of overtemperature and low-level protection.

4.3 Important notes

The user is only protected against those hazards which are caused by exceeding the temperature and by low liquid level.

Further hazards may arise from the type of product being thermostated, e.g. a shift above or below certain temperature levels or a fracture of the container and a reaction with the thermostatic liquid etc.

It is impossible to cover all possible causes, and they remain largely within the decision and responsibility of the user.

Values for temperature variation and indication accuracy apply under normal conditions according to DIN 58966. In special cases high-frequency electromagnetic fields may lead to less favourable values. There is no loss of safety.

Units are in accordance with EMC directive EN 61326-1, class A *:
Units are only suitable for use in industrial areas as disturbing voltage fluctuations might occur.

Warning: The units must only be used according to the descriptions indicated in these Operating Instructions.

This includes operation by properly qualified and instructed personnel.

The units are not designed for operation under medical conditions according to EN 60601-1 or IEC 601-1!

4.4 Warning notes

4.4.1 Temperatures

Parts of the bath cover may reach temperatures above 70°C when working at higher temperatures. The outflow and return pipes of the pumps reach the operating temperature. Touching them is dangerous because of very high or low temperatures!

4.4.2 Mains connection

Connect the unit only to mains sockets with protective earth contact (PE) which must not have a fuse higher than T 16 A.

4.4.3 Mains cable

We have ensured that the mains cable and other plug connections do not touch any hot parts. Please check that there is no contact between the connecting tubings filled with hot liquid or other hot parts and the mains cable!

* Notice only valid for EU countries

4.4.4 Fume extraction

Depending on the bath liquid used and the operating method there is a possibility that toxic vapours may be produced. In that case it is necessary to provide an appropriate fume extraction. Pull out the mains plug before cleaning the bath with solvents. Provide appropriate fume extraction. Before starting up the unit it is absolutely essential to ensure that the bath contains no explosive mixtures. If necessary purge it with nitrogen!

4.4.5 Cooling water, steam production

When changing the bath liquid from water to heat transfer fluids for temperatures above 100°C any remaining water - including the one in the hoses and external system - has to be removed completely. Otherwise there is a danger of burns because of delayed boiling.

5 Bath liquids and hose connections

The operating temperature ranges specified for the bath liquids and the tubings are for general information only and may be restricted through the operating temperature range or safety requirements specified in the appropriate standards (see Item 4.2).

5.1 Bath liquids

LAUDA Designation		Working temperature range	Chemical Designation	Viscosity (kin)	Viscosity (kin) at Temperature	Fire-point	Ref.No. Quantity		
	Former designation	from °C to °C	at 20°C	mm²/s	mm²/s		5 l	10 l	20 l
	Water	+5...+90	deionised water ①	--	--	--			
Kryo 20	160 MS	-20...+180	Silicone oil	11	28 at -20°C	> 230	LZB 116	LZB 216	LZB 316
Kryo 30 ②	G 100 ②	-30...+90	Mono-ethylene-glycol/water	4	50 at -25°C	--	LZB 109	LZB 209	LZB 309
Kryo 85	Ultra-Therm XLT	-85...+30	Silicone oil	1,76	17 at -80°C	> 56	LZB 113	LZB 213	LZB 313
Ultra 350	330 SCB	+30...+200	synthetic thermal oil	47	28 at +30°C	> 240	LZB 107	LZB 207	LZB 307
Ultra 300	Ultra-Therm SW 300N	+80...+300	Silicone oil	170	35 ... +80°C	> 400	LZB 108	LZB 208	LZB 308

① At higher temperatures → Evaporation losses → Use bath covers (≥ Section 10. Accessories). Distilled water or fully deionised water must only be used with the addition of 0.1g sodium carbonate (Na_2CO_3) /l water, otherwise→ danger of corrosion!

② Water content falls after prolonged operation at higher temperatures → mixture becomes flammable (flash point 128 °C) → Check the mixture ratio with a densitometer.

- When selecting bath liquids it should be noted that performance must be expected to worsen at the lower limit of the operating temperature range due to increasing viscosity. The full operating range should only be utilised if really necessary.
- The operating ranges of the bath liquids and tubing represent general data which may be limited by the operating temperature range of the unit.

Silicone oil causes pronounced swelling of Silicone rubber → never use Silicone oil with Silicone tubing!

DIN Safety data sheets are available on request!

5.2 Hose connections

Tubing type	Int. dia. Ø mm	Temperature range °C	Application	Ref. No.
EPDM-tubing uninsulated	9	10...120	for all bath liquids except Ultra 350 and mineral oils	**RKJ 111**
EPDM-tubing insulated	9	-60...120	for all bath liquids except Ultra 350 and mineral oils	**LZS 019**
EPDM-tubing uninsulated	12	10...120	for all bath liquids except Ultra 350 and mineral oils	**RKJ 112**
EPDM-tubing insulated	12 ext. dia. 35mm approx.	-60...120	for all bath liquids except Ultra 350 and mineral oils	**LZS 021**
Silicone tubing, uninsulated	11	-30...100	water, water/glycol mixture	**RKJ 059**
Silicone tubing, insulated	11 ext. dia. 35mm approx.	-60...100	water, water/glycol mixture	**LZS 007**

- EPDM-tube not for Ultra 350 and mineral oils!
- Silicone oil causes pronounced swelling of Silicone rubber → never use Silicone oil with Silicone tubing!
- Protect tubing with hose clips against slipping off.

Metal hoses single-layer insulation	Tube connection	Ø i (mm)	Ø a (mm)	Temperature range °C	Length	Ref. No.
MC 50	M 16x1	10	18	-10...400	50	**LZM 040**
MC 100	M 16x1	10	18	-10...400	100	**LZM 041**
MC 150	M 16x1	10	18	-10...400	150	**LZM 042**
MC 200	M 16x1	10	18	-10...400	200	**LZM 043**
Pump link	M 16x1	10	18	-10...400	20	**LZM 044**

Metal hoses with insulation	Tube connection	Ø i (mm)	Ø a (mm)	Temperature range °C	Length	Ref. No.
MK 50	M 16x1	10	44	-90...150	50	**LZM 052**
MK 100	M 16x1	10	44	-90...150	100	**LZM 053**
MK 150	M 16x1	10	44	-90...150	150	**LZM 054**
MK 200	M 16x1	10	44	-90...150	200	**LZM 055**
Pump link	M 16x1	10	44	-90...150	20	**LZM 045**

Metal hoses with insulation	Tube connection	Ø i (mm)	Ø a (mm)	Temperature range °C	Length	Ref. No.
MGK 50	M 19x1,5	12	36	-90...150	50	**LZM 056**
MGK 100	M 19x1,5	12	36	-90...150	100	**LZM 057**
MGK 150	M 19x1,5	12	36	-90...150	150	**LZM 058**
MGK 200	M 19x1,5	12	36	-90...150	200	**LZM 059**

Metal hoses with triple insualtion	Tube connection	Ø i (mm)	Ø a (mm)	Temperature range °C	Length	Ref. No.
MC 50 S	M 16x1	10	34	-60...350	50	**LZM 046**
MC 100 S	M 16x1	10	34	-60...350	100	**LZM 047**
MC 150 S	M 16x1	10	34	-60...350	150	**LZM 048**
MC 200 S	M 16x1	10	34	-60...350	200	**LZM 049**

Further details on thermostatic liquids and hoses can be found in our special publication.

6 Unpacking, assembly and setting up

6.1 Unpacking

Goods are packed carefully, largely preventing transport damage. If unexpectedly some damage is visible on the equipment please inform the carrier or the postal authority so that it can be inspected.

Standard accessories

1 Bath cover	bei RC 6 CP	Cat.-No. HDQ 070
1 Bath cover	for RC 20 CP, RK 20 KP	Cat.-No. HDQ 067
2 Bath cover	for RC 25 CP	Cat.-No. HDQ 067 and HDQ 068
1 Bath cover	for RL 6 CP	Cat.-No. HDQ 073
1 Bath cover	for RK 8 CP, RK 8 KP	Cat.-No. HDQ 042
2 Nipples 13mm dia		Cat.-No. HKO 026
2 Screw caps		Cat.-No. HKM 032
2 Closing plugs	not for RK 8 CP	Cat.-No. HKN 065
1 Pump link	for RK 8 CP	Cat.-No. LZM 045

Operating Instructions

6.2 Setting up, operation as bath thermostat

Set up the unit conveniently so that the control panel is towards the front and ensure that the air circulation for the refrigeration system through the grille in the lower part of the unit and the ventilating openings at the back of the unit are not restricted. A minimum spacing of 20 cm between grille and wall is recommended.

Close the drain cock at the back or at the side of the bath!

When operating as bath thermostat - no external system connected up - it is advisible to ensure the internal circulation by removing the closing plugs from the pump flow and return connections. Remove the screw caps and link the pump connections together using a piece of hose.

As a permanent arrangement the hose link of flexible insulated metal tubing (Cat. No. LZM 045 -90...150°C or LZM 044 0...400°C) is the best and safest solution.

Note: When loosening or tightening the screw caps (19 mm a/f), hold the threaded nipple on the tubing connections with a spanner (14 mm a/f)!

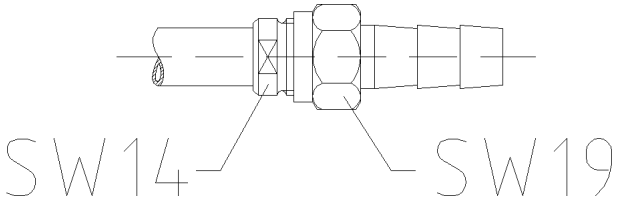

7 Connection of external systems

7.1 Closed external circuits

Remove the closing plugs by releasing the threaded rings (19 mm a/f) from the outflow and return connections and replace them by the tubing nipples (13 mm dia.) supplied.

If the thermostat is connected to closed external circuits, additional liquid must be poured in after the thermostat has been switched on until the level in the bath remains at the correct height (approx. 2 cm below the cover plate).

At higher operating temperatures the expansion in volume of approx. 8% per 100°C during the filling must be taken into account.

For suitable tubing materials see Section 5.

With external systems at a higher level it may happen even in closed systems that the external volume drains down and the thermostat bath overflows if the pump is stopped and air enters the thermostated system!

Always ensure the maximum possible flow area in the external system (nipples, tubing, system). This results in a larger flow and therefore improved thermostatic control.

Note: Always protect the tubing with hose clips against slipping off, or use stainless steel hoses (V2A) with screwed connections.

7.2 Open systems (baths)

The units (except RK 8 CP) are equipped with a pressure/suction pump. This can be used for the circulation of closed external circuits at higher pump outputs and in particular also of open external baths. There are two possibilities for maintaining the level in external baths:

1. The suction tubing is mounted in the external bath so that its end is at the required liquid level. The flow of the pressure stage is restricted with a tubing clamp on the hose from the pressure connection to the external bath so that flow of the pressure stage is restricted slightly below that of the suction stage. This can be noticed when air enters the suction tubing.
   This operating method is not recommended, in particular at temperatures below 0°C or when using oil at elevated temperatures.

2. The preferred solution is the use of the LAUDA level controller (Cat. No. LPZ 901) which provides the functions of the adjustable level control with float, srew-on connection for external bath, and clamp fitting for 4 mm dia. Pt 100 probe.

7.2.1 Fitting the level controller

Level controller Cat. No. LPZ 901

Mount the level controller on the external bath using the screw clamp ①. The mounting is suitable for both round and rectangular baths. Height adjustment after loosening the screw ②. Ensure a good circulation and the freedom of movement of the float!

Make the hose connections to the thermostat, connect the pressure nipple ¯ to the pressure side and the suction nipple ⑤ to the suction side (see diagram).

Clamp fitting for Pt 100 probe (4 mm dia.) ③. The clamp ⑥ is not required on these units!

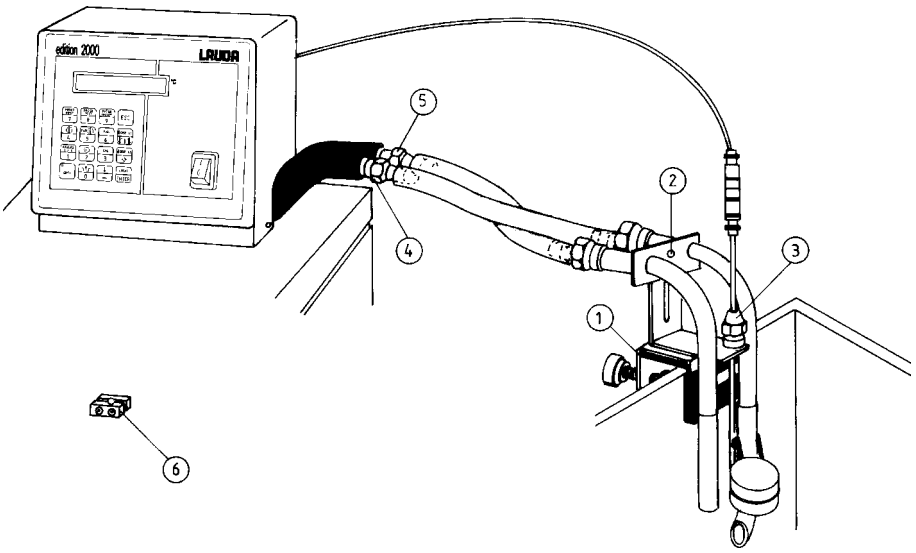

It is advisable to set up the external bath at the same level.

If the difference in level between the open external bath and the thermostat bath is greater than 0.5 m there is the possibility in certain applications that the control range of the level controller is not sufficient. At a higher (lower) external bath level the suction (pressure) hose should then be clamped off with a tubing clamp to such an extent that a constant level in the bath is obtained at which the float is within its control range.

Note : If the thermostat and the external bath are not at the same level it is essential to provide the venting of the connecting hoses when the pump is switched off in order to prevent overflowing.

It is preferable to use the Non-Return Fitting (see accessories) which is mounted at the highest point of the hose connection (bath or thermostat connection) and which is linked electrically to the mains output 34 H.

Non-Return Fitting Cat. No. UD 125

Always protect tubing with hose clips against slipping off, or use stainless steel hoses with screwed connections.

Note: When tightening the screw caps (19 mm a/f) at the tubing connections, hold the threaded nipple with a spanner (14 mm a/f)!

8 Starting up

8.1 Filling

Fill the unit with bath liquid to suit the operating temperature, see Section 5. The filling volume is given under Technical data. In general the thermostat must be filled no higher than 2 cm below the cover plate. When working with thermal oils (e.g. Ultra-Therm 330 SCB) slightly less liquid should be filled in because of its expansion. The level must obviously not fall below the minimum, otherwise the low-level protection switches off the unit (see Safety circuit). The same applies to filling an external system by the pump during start-up.

8.2 Connection to supply

Connect the unit only to an earthed socket (PE). Compare the details on the label with the mains voltage (see Item 4.4.2).

Model according to EMC directive EN 61623-1 (industrial areas only).*

When working without external system, ensure that the pump connections are linked together (metal hose link Cat. No. LZM 045 -90...150°C; LZM 044 0...400°C).

* Notice only valid for EU countries

8.3 Basic functions

8.3.1 Supply switch-on

Switch on the mains switch. The green indicating lamp lights up. The display shows consecutively

Fa LAUDA P-Thermostat	
Type RC 6 CP V 2.XX Date	depending on type and software version
L1 Ti = 20.00°C C L2 TS= 10.00°C Ti I	other values depending on bath temperature and setpoint

8.3.2 Standard display

Top line L1

Ti	=	bath temperature (i = internal)
C	=	output in cooling range
H	=	output in heating range

= cooling indication proportional to cooling actuation control

= heating indication proportional to heating actuation control

Bottom line L2

TS	=	setpoint temperature (S = setpoint)
Ti	=	control variable is Ti (bath temperature), can be switched to T1 or T2 (ext. Pt 100)
I	=	setpoint source (I = internal = input from keys, P = programmer, R = from RS 232 C, A = analogue input socket 52 S)

The display in line 1 (L1) can be switched by pressing the keys 

and repeated operation of

to T1, T2, Ti etc.

T1, T2 = measurements of external Pt 100 probes

The display in line 2 (L2) can be switched by pressing the keys 

and repeated operation of

to

Y = actual output + heating - cooling

TSi = measurement of safety comparison probe with limited resolution and accuracy

Ti, T1, T2, TS etc.

8.3.3 Basic action on inputs and outputs

From virtually every display or input function the key

aborts and returns to the selected standard display!

Numerical inputs are always made with the SHIFT function switched off (LED in SHIFT key off)!

After the last digit of a number the cursor returns to the first digit so that corrections can easily be made before pressing the

key.

A brief beep on pressing a key means that this input is not possible!

Error messages are indicated with text notes and accompanied by a beep. After approx. 5 sec the message disappears and the beep switches off!

8.3.4 Overtemperature switch-off point

Press the DISP L1 key to indicate the current overtemperature switch-off point (TO).

Important: The green LED in the SHIFT key must not be alight. If necessary bring the keypad to the basic mode by pressing the SHIFT key (LED off). If TU is indicated, press DISP L1 again to indicate TO.

L2 TO: _95.00 Ti I

TO = overtemperature switch-off point

TO can be selected within the unit temperature range + 5 K.

Return to the standard display without change with ESC. A new value is input with the number keys (SHIFT, off); e.g. 98.70°C requires 0, 9, 8, 7, 0 LOCAL ENTER. After the last digit the cursor returns to the first digit again so that any corrections can easily be made.

Pressing the key LOCAL ENTER. Enter you are asked

L2 TO neu Y/N 1/0__(0)

Here the changed value must be confirmed with input ANALOG I/O 1 or, if no modification is requested, the initial value can be unscrambled again with input 0. As default value 0 is preset.
This interrogation was introduced in order to reach an additional protection from unintentional adjusting of the over-temperature switch-off point.

It is obviously essential to select a value above the current bath temperature (Ti) and the current setpoint (TS), otherwise the equipment is switched off by the safety circuit with

L1 TEMPERATURE

L2 TOO HIGH!

or the message

L2 TS >> TO

and the value is not accepted.

With activated outflow temperature limit Tio To must always be 5°C higher than Tio. Otherwise announcement

Tio >> To –5°C.

If the unit was switched off in the fault status an audible signal reports the stored fault when switching on.

Press the reset key . Depending on the previous sequence press again.

If necessary check whether the overtemperature switch-off point TO is above the current bath temperature and whether the bath is filled sufficiently!

8.3.5 Low temperature switch-off point

Press (SHIFT OFF) to indicate the current low temperature switch-off point TU. If TO is indicated, press the key again to bring TU on display.

L2 TU: _-10.00°C

TU = low temperature switch-off point

TU can be set up to 10 K below the working temperature range of the unit.

If the bath temperature falls below TU, TU appears on the display in L2 so that a new value can be input if necessary. In addition the refrigeration unit is switched off so that TU can be used e.g. as anti-freeze protection and of course as setpoint limitation!

8.3.6 Setpoint input

Press the key (SHIFT LED off). L2 shows

L2 TS: _ 20.00°C Ti I

The setpoint (TS) can be input within the unit temperature range but not higher than the current overtemperature switch-off point. When the input is too high, pressing does not enter the value but instead produces the message

L2 TS >> TO

Input Ts with number keys and the negative sign (SHIFT OFF), e.g. for -25.03°C input -, 2, 5, 0, 3 LOCAL ENTER. Or for 1.93°C input 0, 0, 1, 9, 3. After the last digit the cursor returns to the first digit again so that corrections can easily be made.

8.4 Parameter level PAR

Pressing the key PAR 6 several times in the SHIFT mode (green LED in SHIFT key alight) leads successively to the input functions described below.

8.4.1 Auto-adaptation

Here it is possible to start the controller auto-adaptation by the input of 1 (SHIFT OFF) and pressing the LOCAL ENTER key.

There should be the largest possible difference between the bath temperature and the setpoint to be entered subsequently, i.e. the time to reach the setpoint has to be longer than 5 min, preferably 10 min. In addition, auto-adaptation is obviously possible only during a heating or cooling phase which is actively influenced by the energy sources available.

Example 1: intended operating temperature approx. 70°C:

1. set the setpoint to 70°C
2. within 1 minute start auto-adaptation at the PAR level, e.g. at a bath temperature corresponding to the ambient temperature

On reaching the setpoint the auto-adaptation switches off automatically, and the result of the auto-adaptation can be indicated at the control parameter level PAR 5 (see Item 8.6).

Example 2: it is required to operate at approx. -20°C with controlled cooling:

1. set the setpoint to -20°C
2. start auto-adaptation at the PAR level

8.4.2 Output limitation

Normally the maximum heating or cooling output is available. For special applications it is possible to set a limit for both heating and cooling output.

At the PAR level select display

L1 Output

L2 in per cent_ 100 %

Using ↓ / − the display can be switched from e.g. 100%, i.e. heating output limitation, to cooling output limitation with a negative sign.

By the input of e.g. 0, 0, 5, 8 LOCAL ENTER, SHIFT OFF, a heating output limitation of 58% can be set.

With e.g. -, 0, 9, 3 LOCAL ENTER a cooling output limitation of 93% is entered.

The action can be recognised by the symbols and flashing even at large control deviations.

At thermostats with refrigeration system the activation of the refrigeration can be suppressed by entering -000%.

Only values between 10 and 100% or -10 and -100% can be entered, otherwise the display shows the message

L1 Output

L2 OUT OF RANGE

8.4.3 Display resolution L1

At the PAR level display select

L1 Display 0.001 = 1

L2 resolution 0.01 = 0

Enter 1 SHIFT OFF, LOCAL ENTER. Switches all displays in L1 to 0.001 K resolution. The temperatures are then displayed with approx. 2 digit resolution. Input "0" switches all the displays in L1 to 0.01 K resolution.

Normally a resolution of 0.01 K is used.

8.4.4 Contact input Fault 14 N

When using the contact input "FAULT" 14 N, pins 1 and 2 of the socket have to be connected together when there is no fault. If this input is not being used, a blanking plug with a link has to be plugged in. The function of the contact input fault can be switched off at the PAR level on the display

L1 Alarm Inp. con 14 N

L2 on = 1 off = 0

by the input of "0" (SHIFT OFF). A shorting plug is then not required.

If the alarm input has been activated in error by the input of "1", the unit can be restarted by the following inputs:

Press the key

. Select "Alarm Inp. con 14 N" at the PAR level. Input "0" with

. Press

again.

If a fault message has been produced by opening the external signal circuit, reset by pressing the key

twice after rectifying the fault.

Connections contact input "Fault" 14 N (alarm in)

3-pin flange socket to NAMUR recommendation NE 28

1 = n.o. (close)
2 = common
3 = not used

Connector plug 3-pin Cat. No. EQS 048

Contact loading approx. 5V 2mA. No voltage must be connected! Use shielded connecting cables. Connect the shielding to the plug case. Cover the unused connectors with protective caps!

8.4.5 Baud rate RS 232

On the display at the PAR level

L1 Ser. Int RS 232

L2 Baud Rate 9600

it is possible to switch with

between 9600 and 4800. With

(SHIFT OFF) the indicated baud rate is entered.

8.4.6 Menu language

On the display at the PAR level

L1 Lang. Germ = 0

L2 Engl = 1 French = 2

the menu language can be selected. Enter the corresponding code numbers 0, 1 or 2 with

on SHIFT OFF.

8.4.7 Calibrating the analogue output channels

The 90% values of the analogue voltage outputs channel 1 and 2 or the analogue current output of channel 1 can be calibrated separately for channel 1 (voltage or current) and channel 2 (voltage). The factory calibration on channels 1 and 2 for 0...10 V = -100...400°C is performed at 9 V = 350°C.

In special cases, e.g. to correct scaling deviations of instruments connected to the output, or if channel 1 is to be a current output, the output can be calibrated by the user.

At the PAR level display select

L1 Analogue outp Cal?

L2 Chan 1 = 1 Chan 2 = 2

Input SHIFT OFF 1 [LOCAL / ENTER], or 2 for channel 2.

Depending on the selected configuration of the analogue outputs (see Item 8.11) the socket 52 S (analogue signals, see Item 8.9), pin 2, carries a voltage signal of approx. 95% or 9.5 V, or pin 5 the corresponding current signal of approx. 19 mA in case of current configuration for channel 1.

Using a precision multimeter or e.g. a temperature recorder set the output signal to 9 V or 18 mA or the corresponding temperature by repeated operation of the key [↓ / –] (SHIFT ON).

Pressing [ESC] leaves the menu and the most recent value setting is entered.

If the value was selected too low, leave the PAR level with [ESC] and make a new selection.

Calibration of channel 2 is similar. Connect the measuring instrument to pin 1 (voltage signal only).

8.5 Calibration of the temperature measurement circuits

With the calibration function the indications of the three temperature measuring points bath temperature T_i, external Pt 100 probe T_1 and external Pt 100 probe T_2 can be set to a known accurate value. The resulting correction is processed additively over the entire temperature range.

Check first that a sufficiently accurate reference is available, otherwise it is better to use the factory calibration which gets lost by overwriting!

Pressing the key [CAL / 3] in the SHIFT mode (green LED in shift key alight) produces the display

L1 CALIBRATE

L2 T_i = 0 T_1 = 1 T_2 = 2

The channel to be calibrated is selected with 0, 1 or 2 [LOCAL ENTER].

When selecting an unused channel, e.g. if Pt 100 is not connected to T_2 the display shows

L1 Ext Pt 100 not

L2 connected.

For calibration a sufficiently accurate reference temperature measurement should be possible, and the measurement point temperature should be constant.

The display shows

L1 T_1 61.04°C

L2 T_C _ . °C

The value shown in L1 is the measured value obtained without any correction using probe and electronics without calibration.

Now enter the real value for the measurement point T_1 (e.g. 60.00°C).

Example: 0, 6, 0, 0, 0 [LOCAL ENTER]

T_i or T_2 can be calibrated in the same way.

In order to avoid dangerous conditions the correction is limited to ±5 K. In case of larger corrections the display shows

L1 CORRECTION VALUE

L2 TOO LARGE

and the entered value is not accepted.

You can leave the calibration level with [ESC].

8.6 Control parameters

8.6.1 Indication and input of the control parameters

Pressing the key

several times in the SHIFT mode (green LED in shift key alight) shows the outflow temperature limitation, the correction limitation and the control parameters X_p, T_n and T_v on the display in L2.

Example:

L2	TiO:	120°C	Ti	I
L2	Td:_	30°C	Ti	I
L2	Xp: _	0.5°C	Ti	I
L2	Tn: _	12.0 s	Ti	I
L2	Tv: _	2.0 s	Ti	I

In order to use control parameters other than those found by auto-adaptation (see Item 8.4.1) the values can be entered in the appropriate display after switching off the SHIFT function, pressing

, LED off.

Example for X_p:

0, 0, 1, 0

if the required value is 1.0°C.

For values above 200.0°C or 200.0 sec the message

L2 OUT OF RANGE

appears.

8.6.2 Recommendations for the control parameters

In most cases satisfactory control results are obtained with the following control parameters:

bath liquid	water	oil
X_p	0.5°C	1°C
T_n	10 s	25 s
T_v	2 s	5 s

8.6.3 Bath temperature limitation

The limitation of the bath temperature is an additional warning and switch-off function switching off the heating at a selectable value; i.e. the heating output is set to "0". This protects the unit from a continuous cutoff via the safety circuit especially during external control at certain operating conditions.

To enter the switch-off point T_{iO} proceed as described in Item 8.6.1 and switch the display to input and indication.

Example:

L2 T_{iO} 120°C

Change the value by entering the figures with a resolution of 1°C.

Enter the new value by pressing

.

It is possible to select values within a range from 50°C to the selected overtemperature switch-off point T_O - 5°C. If this range has not been respected the display shows the message

L2 T_{iO} >> T_O - 5°C

Of course T_{iO} has to be set above the setpoint T_S; otherwise the display shows the message

L2 T_S > T_{iO}

The bath temperature limitation can be switched off by entering

L2 T_{iO} 000

If the bath temperature T_i exceeds the selected switch-off point the display shows

Example: L2 T_{iO} 120°C

and there is an acoustic signal.

The heater switches off. As soon as the temperature has dropped the unit starts working again.

8.6.4 Correction limitation

During the operation with external control it may be necessary not to exceed the difference between the bath temperature T_i and the measuring point for the external control T_1 or T_2, e.g. in order to get a smooth heating of the material or the vessel. Such a limit value can be selected by the variable T_d. If the value T_d is exceeded the heating or cooling output is set to "0". If this function is activated the time for heating up or cooling down may be extended.

To enter the difference value T_d proceed as described in Item 8.6.1, and switch the display to input and indication.

Example: L2 Td _30°C

Change the value by entering the figures with a resolution of 1°C.

Enter the new value by pressing LOCAL ENTER.

It is possible to select values within the temperature range from 5°C to 150°C. If this range has not been respected the display shows

L2 OUT OF RANGE

and there is an acoustic signal.

This function can be switched off by entering

L2 Td 000 °C

8.7 External control

8.7.1 External measurement inputs and external controller

The units have two Pt 100 temperature measurement inputs whose measurements can be indicated (T1, T2).

You can connect an external Pt 100 (T1, T2) at the rear connectors 10 S in 4-wire circuit.

Use shielded connecting cables. Connect the shielding to the plug case. Cover the unused connectors with protective caps!

Pin connections sockets 10 S Pt 100

pin			
1	+	I	current path
2	+	U	voltage path
3	-	U	voltage path
4	-	I	current path

Pt 100
DIN IEC 751

Plug, 4-pin Lemosa, for Pt 100 connection Cat. No. EQS 022

One probe can be selected for the actual value for external control. The unit then operates with cascade control to this actual value, i.e. the unit controls the temperature at the external measurement point to the selected setpoint by suitably altering the bath temperature. Thus the influence of disturbances (changes of load or through-flow, etc.) can be reduced considerably or eliminated totally.

8.7.2 Start of external control

Connect platinum resistance thermometers to both of the Pt 100 inputs 10 S (T1 and T2). It is sensible but not essential to use T1 if only one input is in use.

The external control using the measuring point T_1 is switched on with the key in the SHIFT mode; pressing the key again switches to T_2 as control variable.

Pressing the key once more (SHIFT ON) switches back to the bath control (internal) T_i.

In L2 the position before the final one shows the parameter used as control variable.

L2	TS	= 120.35	Ti	I
			T1	
			T2	

This setting remains stored in case of a fault or after the power is switched off.

If T_1 is selected but no probe has been connected the message

L1 Ext Pt 100 not

L2 connected

appears.

The unit then switches the control variable to T_2 automatically. If T_2 is also not connected, the thermostat switches to T_i.

When changing the setpoint for more than 10°C it may be possible to achieve an improved control result by restarting the external control from the control variable T_i (with SHIFT).

8.7.3 Notes

When operating with external control it is essential to ensure that the probe for the control variable is in good thermal contact with the liquid, otherwise a poor control result must be expected or the control may be completely ineffective.

Proceeding from the control parameters used for bath control the control may have to be adapted either by auto-adaptation (see Item 8.4.1) or by the input of the control parameters.

Important: set the overtemperature switch-off point TO (see Item 8.3.4) sufficiently high since the bath temperature may under certain circumstances become much higher than the setpoint.

8.8 Operation with programmer

Temperature programmes with up to 99 segments can be stored and processed. A segment consists of a target temperature which is to be reached at the end of the segment, and the time duration of the segment. The time "00:00" for temperature differences is possible. In connection with the tolerance range monitoring the

programme continues not until the target temperature is reached. It is useful to prepare a time-temperature diagram before programming and to check whether the energy balance enables the programme speed.

Set the overtemperature switch-off point TO to a value slightly above the highest bath temperature to be expected (see Item 8.3.4).

8.8.1 Programme input

Press the key PROGR INPUT 7 in SHIFT mode. The display shows

L1 PROG. INP

L2 Tstart:_ . °C

Enter here the starting temperature of the programme. SHIFT OFF (automatically), e.g. for 60.00°C input 0,6,0,0,0 LOCAL ENTER.

The display shows

L1 PROG. INP SEG.01

L2 T:_ . °C : h

Now enter the target temperature and the time for the first segment, e.g. for 140.00°C in the time 2 h 00 min 1, 4, 0, 0, 0 LOCAL ENTER then 0, 2 LOCAL ENTER then 0, 0 LOCAL ENTER.

The display shows

L1 PROG. INP SEG.02

L2 T:_ . °C : h

Now enter the target temperature and the time for the second segment, e.g. for a phase at a constant temperature 140.00°C and 1 h 30 min.

After the last programme segment press the key LOCAL ENTER once more and the display shows

L1 PROG. INP

L2 NO. OF CYCLES:_

Input 1 ... 99 is possible.

With more than one cycle it is convenient to have the final temperature and the starting temperature Tstart at the same level!

Afterwards a tolerance range can be input for monitoring the programme.

The display shows

L1 PROG. INP

L2 TOL. RANGE_.

Now you can input a tolerance range value from 0.1 to 9.9 °C. I.e. if the control variable (bath temperature or external temperature T1 or T2) deviates from the set temperature of the segment by more than the tolerance range value while the programme is running, then the programme sequence will be stopped until the control variable is within the tolerance range again. At the same time a "T" appears on the right in L2.

The input of 0.0 switches off the tolerance range function.

8.8.2 Example of a programme

Segment-No.		Input	Press LOCAL ENTER
Tstart		03000	1x
1	°C	7000	1x
	h	02	1x
	min	00	1x
2	°C	7000	1x
	h	01	1x
	min	30	1x
3	°C	9000	1x
	h	02	1x
	min	00	1x
4	°C	8000	1x
	h	02	1x
	min	00	1x
5	°C	1000	1x
	h	02	1x
	min	30	2x
Cycles		1 ... 99	1x
Tolerance range	±°C	(0.0) 0.1...9.9	1x

8.8.3 Programme test

After the input of the programme it is advisable to check that the programme buffer contains the correct data. This is done with the key PROGR TEST 8 in the SHIFT mode. Pressing the key repeatedly produces the same sequence as during the input of the programme.

8.8.4 Changing the programme data

Select the data line to be changed as in "programme test", SHIFT OFF. This resets the data of the indicated segment. Then the data can be input as usual. Enter the new data with LOCAL ENTER each.

8.8.5 Programme start, interruption and abort

It is useful to bring the operating temperature of the thermostat to the programme start temperature T_{start} before starting the programme, or to automatize it by the tolerance range function.

Start the programme sequence with PROGR ON/OFF 9 in the SHIFT mode. The programme sequence can then be followed by the indication of the setpoint T_S.

L_1 shows the segment number on the right, and L_2 shows as a setpoint source a P for "programme" on the right.

The keys 1 to 9 are blocked while the programme is running.

The programme sequence can be stopped with SHIFT PROGR ON/OFF 9 and then be re-started with SHIFT PROGR ON/OFF 9. During the interruption of the programme the display shows a W (wait) on the right in L_2.

The programme can be aborted with ESC and then SHIFT PROGR ON/OFF 9 within 2 sec. Afterwards the programme can only be started with segment 1.

8.9 Connection for analogue signals socket 52 S

6-pin flange socket according to NAMUR recommendation NE 28.

Pin 1: voltage output temperature signal channel 2: setpoint T_S, bath temperature T_i, external Pt 100 T_1 or T_2 can be selected. Scaling can be as follows:
0...10 V corresponding to a temperature range selected within the working temperature range (e.g. 50...80°C)
minimum load 4 kOhm
or
0...6 V = -200...400°C = 10 mV/K
0°C = 2 V
or
0...10 V = -100...400°C
or
0...10 V = 0...100°C

Pin 2: voltage output temperature signal channel 1, other data as pin 1

Pin 3: ground for all signals

Pin 4: setpoint voltage input; scaling can be selected as pin 1.
R_i = 12 kOhm approx.
(+ pin 4; - pin 3)

Pin 5: current output temperature signal channel 1; signal selection as pin 1. Can be configured for 0...20 mA or 4...20 mA. Scaling can be:

0...20/4...20 mA	=	-100...400°C
or		
0...20/4...20 mA	=	0...100°C
or		
0...20/4...20 mA	=	a temperature range selected within the working temperature range (e.g. 50...80°C)

maximum burden 330 Ohm

Connect only either pin 2 or pin 5!

Pin 6: setpoint current input; configuration and scaling as pin 5.

Burden 320 Ohm approx. Maximum voltage 15 V!

Connector plug, 6-pin Cat. No. EQS 057

Use shielded connecting cables. Connect the shielding to the plug case. The mass for all signals (pin 3) must not be connected with ground! If a connection to the ground cannot be avoided use a potential-free signal bridge in between.

Cover the unused connectors with protective caps!

8.10 Analogue inputs

A setpoint in the form of an analogue current or voltage signal can be provided by connection to the socket "Temp.-Signal" 52 S (see Item 8.9).

By pressing the key [ANALOG I/O 1] in the SHIFT mode the display shows

L1 ANALOGUE INP/OUTP

L2 INP = 0 OFF = 1_

Pressing 0 [LOCAL ENTER] selects the configuration and scaling of a setpoint input.

The display shows

L1 ANALOG INP. OFF = 0

L2 ON = 1 CONF = 2_

Input 1 [LOCAL ENTER] switches in a previously configured input as setpoint and L2 shows an "A" at the right end, indicating that the setpoint is determined by the analogue input.

This condition remains stored in case of a fault or after the power is switched off.

Input 0 [LOCAL ENTER] switches the setpoint back to the setpoint source I internal, i.e. key input.

Scaling takes place interactively by applying the voltage and current values corresponding to the appropriate temperature range limits to the corresponding input. For pin connections for voltage or current input on socket 52 S see Item 8.9. This method compensates for various scaling errors, e.g. also those of the sources connected.

Pressing 2 [LOCAL ENTER] configures and scales the setpoint input. The display shows

L1 ANALOG INPUT

L2 U = 0 I = 1

Select a voltage range with 0 [LOCAL ENTER]. Voltages in the range 0...10.5 V can be handled. A current range is selected with 1 [LOCAL ENTER]. Currents in the range 0...22 mA can be handled.

The display shows

L1 ANALOG INPUT

L2 T_{min} = _ . °C

Input the lowest temperature of the range which corresponds to the lowest voltage or current value of the range to be scaled.

Example: range 0...120°C should correspond to 0...10 V approx.

Input 0, 0, 0, 0, 0 LOCAL ENTER.

The display shows

L1 ANALOG INPUT

L2 T_{max} = _ . °C

Input the upper limit of the temperature range: 1, 2, 0, 0, 0 LOCAL ENTER

If the current input is selected, the programme asks whether 0...20 mA or 4...20 mA is required.

The display shows

L1 CURRENT INPUT

L2 0-20 = 0 4-20 = 1

Select 0 LOCAL ENTER or 1 LOCAL ENTER. This menu item is omitted when the voltage input has been selected.

The display shows

L1 INPUT CAL.?

L2 YES = 1 NO = 0

Here the decision is made whether an automatic calibration procedure is started, or whether the voltage or current values from the last calibration procedure are retained with input 0 LOCAL ENTER.

The display returns to the standard display.

With a new calibration the voltage or current source (e.g. setpoint unit, programmer) has to be connected up. The range limits have to be adjustable. The unit may switch to fault if the input signal is not connected. If this is the case it is necessary to connect the input signal first. Then press the reset key 0 and calibrate in the same way as described above.

Select the recalibration with 1 LOCAL ENTER.

The display shows

L1 SET Umin

L2 YES = 1

When the voltage or current corresponding to the lower range limit is applied to the input, confirm this by the input of 1 LOCAL ENTER.

The display shows

L1 ----------wait----------

L2 XXXXXXXXXXXXX

The calibration takes approx. 20 sec. Then the display shows

L1 SET Umax

L2 YES = 1

When the voltage or current corresponding to the upper range limit is applied to the input, confirm this by the input of 1 LOCAL ENTER.

The display shows

L1 ----------wait----------

L2 XXXXXXXXXXXXX

The calibration takes approx. 60 sec. The display then returns to the standard display. The calibration is finished.

Switch on the external setpoint from an analogue input as described in Item 8.10.2.

8.11 Analogue outputs

Two analogue output channels are available at the socket "Temp.-Signal" 52 S (see Item 8.9). They can be set to carry the temperature values

T_i = bath temperature

T_1 = temperature at ext. Pt 100 T_1

T_2 = temperature at ext. Pt 100 T_2

T_S = setpoint.

8.11.1 Temperature signal channel 1

Channel 1 can be configured at socket 52 S on pin 2 as a voltage output or on pin 5 as a current output. Press the key ANALOG I/O 1 in SHIFT mode.

The display shows

L1 ANALOG INP/OUTP

L2 INP = 0 OUTP = 1

Select the processing of the outputs by pressing 1 LOCAL ENTER. The display shows

L1 Analog output

L2 Chan 1=1 Chan 2=2

Select channel 1 by pressing 1 LOCAL ENTER. The display shows

L1 Analog output

L2 U = 0 I = 1_

Select the current output with 1 LOCAL ENTER. The display shows

L1 CURRENT OUTPUT

L2 0-20=0 4-20=1

Select the required current range 0...20 mA or 4...20 mA by pressing 0 or 1 LOCAL ENTER. The current range selection is omitted if the voltage range 0...10 V has been selected in the previous menu.

The display shows the scalings available for selection

L1 CONFIGURABLE=1

L2 analog output_

By pressing the key ↓ — (SHIFT ON) the pre-set scalings are displayed consecutively. The selection is made by the input of the appropriate code (SHIFT OFF).

Configurable means that the temperature range required to correspond to the voltage range 0...10 V, current range 0...20 mA or 4...20 mA can be determined by setting the range start (T_{min}) and the range end (T_{max}).

The display shows

L1 CONFIGURABLE=1

L2 Tmin =_ . °C

Example: range 20...220°C

Input 0, 2, 0, 0, 0 LOCAL ENTER. The display shows

L2 Tmax =_ . °C

Input 2, 2, 0, 0, 0 LOCAL ENTER.

The following fixed scalings are available:

-200...400°C = 0...6 V = 10 mV/K
0°C = 2 V Code 2

-100...400°C = 0...10 V or 0...20 mA or 4...20 mA Code 3
0...100°C = 0...10 V or 0...20 mA or 4...20 mA Code 4

The display then shows

L2 Ti T1 T2 TS 0-3_

E.g. to set the bath temperature on channel 1 input 0 LOCAL ENTER. Similarly for the temperature signal of the external Pt 100 T1 input 1 LOCAL ENTER etc. The display then returns to the standard display.

8.11.2 Temperature signal channel 2

Channel 2 is purely a voltage output at socket 52 S on pin 1. The selection is made as described for channel 1 in Item 8.11.1 except that current ranges cannot be selected.

8.12 Safety function

The operation of the safety devices of the units has already been described in Item 4.1. After starting up the user should confirm the correct operation of the safety devices. If the unit operates without supervision we recommend this check to be carried out daily.

8.12.1 Low-level cut-out

For the correct operation of the low-level cut-out it is essential that the float switch operates correctly. To check this, lower the level in the bath by draining away some of the liquid. When the bath level falls below the minimum level (approx. 20 mm above the upper heater winding) the pump, the heating and the refrigeration unit switch off on all poles.

The display shows the message

L1 LEVEL

L2 TOO LOW

and there is a warning beep.

To re-start fill up the bath and press the reset key

twice (with approx. 1 sec interval).

8.12.2 Adjustable overtemperature limiter

To check it the switch-off point TO has to be set below the current bath temperature. Note that an input of TO below the setpoint TS produces the message

L2 TS >> TO

and the previous value for TO is retained.

Therefore the setpoint TS usually has to be lowered first by a few degrees before this test can be carried out.

The overtemperature switch-off point can then be set e.g. 1 K below the current bath temperature.

Example: Ti = 60°C
TS = 60°C
TO = 65°C

To check the operation of the overtemperature limiter, press

(SHIFT OFF). Input TS = 20°C, press

, the display shows

L1 Ti = 60.00°C C

L2 TO : 65.00°C Ti I

If TU is shown in L2, press

again!

Now input 0, 5, 8, 0, 0

.

The switch-off point of the overtemperature limiter is now 2 K below the bath temperature Ti. The display shows the message

L1 TEMPERATURE

L2 TOO HIGH !

with a beep. Heating, pump and refrigeration unit are switched off on all poles.

To restart the unit press the reset key

.

The display shows the standard display.

Now press

and set TO to a value above the bath temperature, e.g. 70°C: Input 0, 7, 0, 0, 0

. Then press the key

once more. The unit returns to normal operation.

In order to reduce the switching frequency of the refrigeration compressor a number of time delays have been incorporated. The refrigeration unit restarts therefore with considerable delay!

Note: The overtemperature switch-off point has to be set at least 25 K below the fire point of the bath liquid used according to EN 61010.

In case of any malfunction in Items 8.12.1 and 8.12.2 the unit has to be taken out of use immediately and checked by an engineer, otherwise its safety is no longer ensured.

8.12.3 Connection potential-free contact "Combined fault" 12 N (Alarm out)

3-pin flange connector conforms to NAMUR recommendation NE 28

1 = n.o. (make)
2 = common
3 = n.c. (break)
1,2 are linked when unit operation is OK

Use shielded connecting cables. Connect the shielding to the plug case. Cover the unused connectors with protective caps!

Coupling socket 3-pin Cat.No. EQD 047

8.13 Serial interface RS 232 C

9-pin sub-D socket 53 S

8.13.1 Data of the RS 232 C interface

Cables used (computer end)

Computer			Thermostat	
25-pin		9-pin	9-pin	
3	R x D	2	2	T x D (transmitted data)
2	T x D	3	3	R x D (received data)
7	SG	5	5	signal ground
6	DSR	6	6	DTR (data terminal ready)
4	RTS	7	7	CTS (clear to send)
5	CTS	8	8	RTS (request to send)

Use shielded connecting cables. Connect the shielding to the plug case. Cover the unused connectors with protective caps!

Using this interface it is possible to transfer the following data from or to a computer with a suitable interface:

1. Transfer of the setpoint from the computer to the thermostat
2. Read-out of the bath temperature T_i, the external temperature T_1, the external temperature T_2 and the setpoint on the unit
3. Transfer of the low temperature and overtemperature switch-off point
4. Read-out of the set overtemperature and low temperature switch-off point
5. Read-out of the fault signal
6. Transfer of the ramp segments and their processing
7. Status signal
8. Read-out of the control parameter and transfer
9. External controller status and start

8.13.2 General principles

The interface operates with two stop bits, no parity bit and with 8 data bits. The transfer rate can be set to 4800 baud or 9600 baud (see Item 8.4.5).

Values from the computer can be transferred directly to the thermostat, i.e. transmitted, e.g. OUT, SEG and START commands, or data can be transmitted from the thermostat to the computer on request with an IN command. An OUT, SEG or START command, if transmitted correctly, is always acknowledged by the thermostat with the message "OK" followed by LF and CR.
This message, like any other response, has to be requested by the computer!

Any output command (OUT, SEG, START, STOP) switches the thermostat to remote operation. This can be recognized by an R (setpoint source RS 232) on the right in L2.

Then all the keys are locked except for the functions SHIFT

and SHIFT

.

If no output command follows from the connected computer the keyboard can be activated until the next output command by pressing the keys

.

The data requests by the thermostat (IN commands) only lock the programme keys SHIFT

and SHIFT

. All the other key functions are in operation.

In the following text the symbol "_" will be taken to mean blank (no character).

RS 232 interface and controller are operated by a single processor; for optimum control it is therefore advisable to have pauses of at least 100 msec between the interface commands.

8.13.3 Output commands

OUT_XXX.XX	Setpoint transfer with up to 3 places before the decimal point and up to 3 places behind. This includes the negative sign. Transfer can take various forms, e.g. for 5.00°C: 005.00, 05, 05.0, 005, 5.00.

A BASIC programme for the IBM PC which can be used to transfer any values between the set upper and lower limits (see Items 8.3.4 and 8.3.5) and which displays the response "O.K." or a possible error message may be as follows:

Note: set baud rate to 4800 (see Item 8.4.5)!

```
 10      OPEN  "COM1:4800,N,8,2"  AS #1
 20      CLS
 30      LOCATE 8,5:PRINT SPC(70)
 40      LOCATE 8,5
 50      INPUT "Enter your command (without OUT_)";VALUE$
 60      PRINT #1;"OUT_"+VALUE$
 70      INPUT #1;A$
 80      LOCATE 12,5:PRINT SPC(50)
 90      LOCATE 12,5:PRINT "Response of the thermostat";A$
100      TI = TIMER+1
110      IF TI > TIMER THEN 110
120      GOTO 30
130      END
```

The following values can be transmitted similarly to the thermostat:

OUT_LXXX.XX	switching point for low temperature (usually set to the lower range limit of the thermostat)
OUT_HXXX.XX	overtemperature switch-off point. For safety reasons it is essential that, after the transfer, this value is read back with the command IN_9 and checked!
OUT_XPXXX.XX	setting of the control parameter X_p for the controller
OUT_TNXXX.XX	setting of the control parameter T_n
OUT_TVXXX.XX	setting of the control parameter T_v
OUT_RT1	switches the control variable to the source external Pt 100 T_1 (external control)
OUT_RT2	switches the control variable to the source external Pt 100 T_2 (external control)
OUT_RTi	switches the control variable to the source T_i (probe in the bath); control according to the bath temperature
SEG_XXX.XX_XX:XX	using this programme segment command a segment can be written into the programmer buffer. It indicates the target temperature and the segment time hours (2 digits max.) and minutes (59 max.). The segment start is formed by the current setpoint, i.e. before the transfer of a programme segment it is useful to transfer a setpoint as a segment start suitable for the subsequent segment, using OUT_XXX.XX. "_" blank (no character)

SEG_(XX)_XXX_XX:XX	single segment with segment number, used when whole temperature programmes are to be loaded from the computer to the thermostat. Thus, in contrast to the command SEG_, several segments may be transmitted. The programme starts with the latest setpoint; therefore please check before START whether the setpoint suitable for the first segment is available in the unit.
OUT_TBX.X	the tolerance range value is ½ of the value of the total range, i.e. 0.5 is ±0.5 K, range 0.1...9.9 K. 0.0 switches off the tolerance range function.
OUT_CYXX	number of the programme cycles, range 1...99. 0 switches off the function, i.e. the programme is repeated until it is stopped manually.
START	starts the segment contained in the programme buffer
STOP	stops the programme segment run. With START the programme segment starts again from the beginning.

8.13.4 Requesting data from the thermostat

IN_1 indication of the bath temperature (T_i), i.e. the request of the thermostat to transmit the bath temperature

IN_2 indication of the temperature value at the external probe T_1

IN_3 indication of the current setpoint (T_S)

IN_4 status signal, 7 characters

char 1 from the left:	overtemperature fault = 1, no fault = 0
char 2:	low level fault = 1, level OK = 0
char 3:	programmer segment running = 1, programmer segment off = 0
char 4:	control according to the bath temperature (T_i) = 0, T_1 = 1, T_2 = 2
char 5:	setpoint set by analogue inputs = 1, analogue inputs off = 0
char 6:	indicates whether external Pt 100 T_1 is connected = 1, or not connected = 0
char 7:	indicates whether external Pt 100 T_2 is connected = 1, or not connected = 0

IN_5 invalid

IN_6 invalid

IN_7 indication of the temperature of the external probe T_2

IN_8 indication of the current low temperature switch-off point T_U

IN_9 indication of the current overtemperature switch-off point T_O

IN_A indication of the current value of X_p

IN_B indication of the current value of T_n

IN_C indication of the current value of T_v

Examples:

A BASIC programme used to transfer values from the thermostat to the computer and to display them specifying the channel number (e.g. 1 for IN_1, i.e. the bath temperature), is as follows:

Note: set baud rate to 4800 (see Item 8.4.5)!

```
 10    OPEN "COM1:4800,N,8,2" AS #1
 20    CLS
 30    LOCATE 8,5:PRINT SPC(20)
 40    LOCATE 8,5
 50    INPUT "Channel No.";NO$
 60    PRINT #1;"IN_"+NO$
 70    INPUT #1;A$
 80    LOCATE 12,5:PRINT SPC(50)
 90    LOCATE 12,5:PRINT "Response of the thermostat";A$
100    TI = TIMER+1
110    IF TI > TIMER THEN 110
120    GOTO 30
130    END
```

The isolation of the status data may be as follows:

LEFT $ (A$,1)	=	overtemperature fault
MID $ (A$,2,1)	=	low-level fault
MID $ (A$,3,1)	=	programme segment running
MID $ (A#,4,1)	=	control by T_i, T_1 or T_2
MID $ (A$,5,1)	=	analogue input on/off
MID $ (A$,6,1)	=	external Pt 100 T_1 connected
RIGHT $ (A$,1)	=	external Pt 100 T_2 connected

8.13.5 Error messages on the computer

The following error messages can be reported from the thermostat to the computer during operation:

ERR-2: invalid inputs (e.g.: overflow of the input buffer)
ERR-3: invalid command
ERR-5: invalid command when switching the control variable for the controller, e.g. external controller OUT_RT2. Other command than OUT_RTI, OUT_RT1, OUT_RT2.
ERR-6: temperature value cannot be set
ERR-7: syntax error in channel number
ERR-8: channel does not exist

8.14 Timing clock function

The unit is equipped with a clock indicating day, month, year, weekday, hours and minutes and provides these for the timing function.

The clock is backed for approx. 10 years by a built-in battery so that the clock continues to operate even when the unit is not connected to the electrical supply.

8.14.1 Setting and indication of date and time

This function is only required when changing from summer to winter time and vice versa, or when the unit is being operated in other time zones. Date and time are set at the factory when the unit is started up for the first time.

By pressing the key

in the SHIFT mode the display shows

L1 Clock = 0 Activ = 1

L2 SET = 2 FUNCT = 3

By the input of 0

date and time are indicated.

returns to the standard display.

The input of 2

(SET) allows date and time to be altered. The display shows:

L1 DA MO YE H MI

L2 _ . . :

Day, month, year, weekday, hours and minutes are now input in sequence.

Weekday code:

1	Monday
2	Tuesday
3	Wednesday
4	Thursday
5	Friday
6	Saturday
7	Sunday

The hours are input from 0 to 24 (factory-set to Central European Time).

Example: L2 19.01.94 3 16:05

Terminate the input with LOCAL ENTER

8.14.2 Timing clock function

By pressing the key 2 in the SHIFT mode the display shows the menu as described in Item 8.14.1.

Select the timing function FUNCT = 3 with 3 LOCAL ENTER.

The display shows

L1 Thermostat ON = 1

L2 OR OFF = 0

Here it can be selected whether the thermostat should automatically switch on or off at the time to be selected subsequently in Item 8.14.3. Input either 1 or 0 as appropriate. A display to input date and time appears.

Input here the switching point for the timing function as described in Item 8.14.1 and enter it with LOCAL ENTER. The display returns to the standard display.

8.14.3 Activating the timing function

By pressing the key 2 in the SHIFT mode the display shows the selection menu as described in Item 8.14.1. Activate the timing function with ACTIV = 1 by the input of 1 LOCAL ENTER. Again the display shows

L1 Clock

L2 ON = 1 OFF = 0

Normally 1 LOCAL ENTER is input here to activate the timing function.

The timing clock symbol now appears in line L1 before the last position. If the previous selection was that the thermostat should switch on automatically, the thermostat now switches off and starts up at the selected time.

When the unit has been switched off through the timing function, the display shows

L2 CLOCK STOP!

The activated timing function can always be switched off with off = 0, i.e. with 0 LOCAL ENTER. In addition the timing function can be cancelled at any time with ESC.

9 Maintenance

9.1 Safety notes in case of repairs

Always pull out the mains plug for all repair and cleaning operations! Repairs on the control unit with the cover removed must be carried out by a qualified electrician only.

9.2 Repair and re-initilisation

LAUDA thermostats are largely free from maintenance. Dirty thermostatic liquid should be removed through the drain cock and replaced. If the unit should become faulty it may be advisable to return only the faulty module where appropriate.

The control unit can easily be removed after removing the cover, releasing 2 screws ① (2 turns) behind the front panel and 2 screws at the back, as well as disconnecting the electrical connections ②. The module with pump, heater, temperature probe etc. can also be separated from the bath easily.

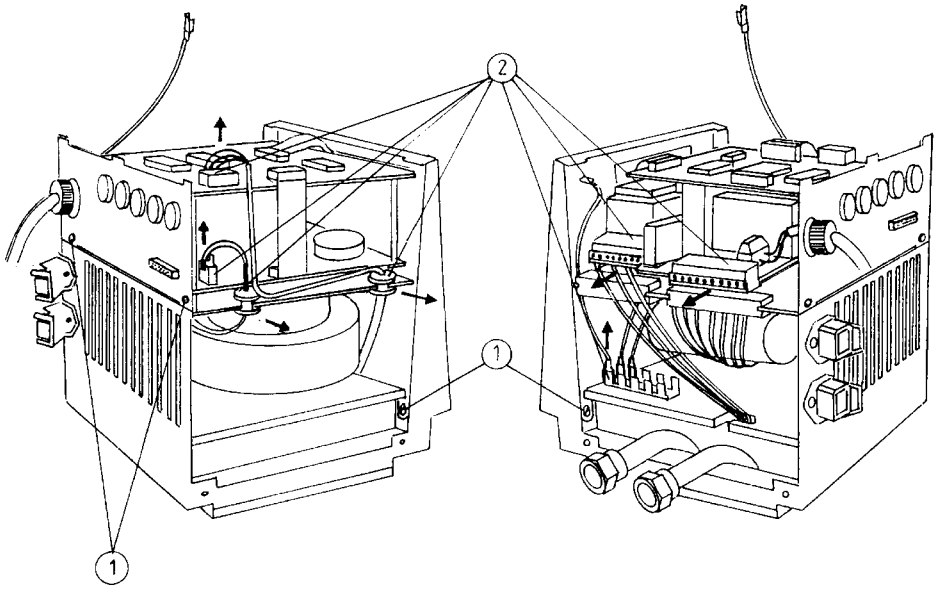

When replacing the control unit, check whether the new control unit has been programmed for the correct basic unit type. If the correct type does not appear after having switched on the mains switch, proceed as follows:

Mains switch off, press the keys SHIFT and PAR 6 simultaneously and at the same time switch on the supply.
Wait until the following display appears:

L1 RK 20 K = 0 K 12 K = 1

L2 Type

Release the keys SHIFT and PAR 6, and go through the menu with the key ↓ — until the required type appears. Input the code number and enter with LOCAL ENTER.

The type designations are shown abbreviated, e.g. RC 6 C instead of RC 6 CP.

There is no provision for a fuse for the complete unit since the necessary 16A fuse corresponds to the mains fuse usually provided at the location. The control circuit of the unit has a separate fuse; a fuse 5 x 20 F4A is located in the control unit. This is accessible after removing the cover. When the fuse has blown the green lamp in the mains switch does not light up.

9.3 Maintenance of the refrigeration system

The refrigeration system operates largely without maintenance. If the unit is being operated in a dusty atmosphere we recommend to clean the condenser of the refrigeration system at intervals of 4 to 6 months. This is best done with compressed air or nitrogen by blowing into the ventilation openings for a few minutes. If necessary unscrew the front grille.

Repair and disposal note

The cooling circuit of the types RC and RK is filled with the HFHC refrigerant R 404 A (HP 62).
The high-temperature stage of the RL-units is filled with the HFHC refrigerant R 404 A; their low-temperature stage is filled with the HFHC refrigerant R 23.
The repair and disposal must be carried out by a qualified refrigeration engineer only!

9.4 Cleaning

The unit can be cleaned using a cloth moistened with water with the addition of a few drops of (domestic) detergent. No water must find its way into the control unit.

The user is responsible for any necessary decontamination if dangerous materials have been spilled on or inside the unit. This applies in particular if the unit is removed for a different use, for repair, storage etc.

The method of cleaning or decontamination is determined by the expertise of the user. If the user has any doubts on whether this may damage the unit he has to contact the manufacturer.

9.5 Spares ordering

When ordering spares please specify the equipment type and number on the label. This avoids queries and prevents the supply of wrong goods!

We shall always be happy to deal with queries, suggestions and complaints.

LAUDA DR. R. WOBSER
GMBH & CO. KG
Postfach 1251
97912 Lauda-Königshofen
Tel: (+49) (0) 9343/ 503-0
Fax: (+49) (0) 9343/ 503-222
E-mail info @ lauda.de
Internet http://www.lauda.de

10 Accessories

Accessories for LAUDA Compact Low-temperature thermostats RC-P and RK-P

Racks in stainless steel
for test tubes, centrifuge tubes etc.

Bath RC 20 up to 2 racks

RD 13	for 56 tubes 10 - 13 dia., 80 mm immersion	Cat. No. UG 066
RD 18/1	for 33 tubes 14 - 18 dia., 80 mm immersion	Cat. No. UG 067
RD 18/2	for 33 tubes 14 - 18 dia., 110 mm immersion	Cat. No. UG 068
RD 30	for 14 tubes 24 - 30 dia., 110 mm immersion	Cat. No. UG 069

Bath RC 25 up to 4 racks

RE 13	for 56 tubes 10 - 13 dia., 80 mm immersion	Cat. No. UG 070
RE 18/1	for 33 tubes 14 - 18 dia., 80 mm immersion	Cat. No. UG 071
RE 18/2	for 33 tubes 14 - 18 dia., 110 mm immersion	Cat. No. UG 072
RE 30	for 14 tubes 24 - 30 dia., 110 mm immersion	Cat. No. UG 073

Bath RC 6 1 rack

RF 18/1	for 20 tubes 14 - 18 dia., 80 mm immersion	Cat. No. UG 074
RF 18/2	for 20 tubes 14 - 18 dia., 110 mm immersion	Cat. No. UG 075

Bath RK 8 1 rack

RG 18/1	for 20 tubes 14 - 18 dia., 80 mm immersion	Cat. No. UG 076
RK 18/2	for 20 tubes 14 - 18 dia., 110 mm immersion	Cat. No. UG 077

Details of other racks on request

Rising platform for retrofitting — Cat. No. LCZ 012
size 250x160 mm, with continuous height adjustment
suitable for

Bath RC 20 (1 platform)
Bath RC 25 (2 platforms)
Bath RK 20 (1 platform)

Gable cover, stainless steel for RC 25 — Cat. No. LCZ 011

Level controller — Cat. No. LPZ 901
for thermostating an open external bath
using pressure/suction pump

Non-return fitting — Cat. No. UD 125
for automatic venting of the connecting hoses
when thermostating an open external bath

Remote operation FBC — Cat. No. LCZ 960
without cable set
The electronic control unit is placed separately
from the unit and linked to it by cable.

Cable set for FBC length 5 m — Cat. No. UK 235

Cable set for FBC length as specified — Cat. No. UK 238

Nipples
for pump connections

13 mm dia., 10 mm int. dia.	Cat. No. HKO 026
11 mm dia., 7 mm int. dia.	Cat. No. HKO 025

Equipment trolley — Cat. No. LCZ 036
for all compact bench thermostats RM 20-, RC-, RK- and RL-; movable; stepless height adjustment; cover plate of the units can be adjusted to height of laboratory bench

LAUDA Pt 100 platinum resistance thermometers
to DIN IEC 751 Class A for external control
and other temperature measurement

Pt 100-42 — Cat. No. ETP 049
all-glass version with NS 14/23 ground taper DIN 12242
Temp. range -100...300°C
50% response time 0.8 sec
Overall length approx. 115 mm
4-wire circuit
Fig. 1

Pt 100-44 — Cat. No. ETP 007
all-glass version with NS 14/23 ground taper DIN 12242
Temp. range -100...300°C
50% response time 0.8 sec
Overall length approx. 320 mm
Fig. 2

Pt 100-66 — Cat. No. ETP 008
as Pt 100-44
Overall length approx. 430 mm
Fig. 2

Pt 100-90 — Cat. No. ETP 050
stainless steel protection tube 4 mm dia.
Temp. range -100...300°C
50% response time 1.5 sec
Overall length approx. 120 mm
4-wire circuit
Fig. 3

Pt 100-70 — Cat. No. ETP 009
stainless steel protection tube 4 mm dia.
Temp. range -200...300°C
50% response time 1.5 sec
Overall length approx. 290 mm
4-wire circuit
Fig. 3

Pt 100-92 — Cat. No. ETP 051
stainless steel protection tube 4 mm dia.
with attached Silicone cable 2 m long and plug
Temp. range -100...200°C
50% response time 3 sec
Overall length approx. 250 mm
4-wire circuit
Fig. 4

Connecting cable
with 4-pin plug for external control on
all C-and K-units and for digital thermometer

for Pt 100-44 and Pt 100-66 1.5 m	Cat. No. UK 048
length as specified	Cat. No. UK 213
for Pt 100-42, Pt 100-70, Pt 100-90 1.5 m	Cat. No. UK 047
length as specified	Cat. No. UK 212

Screw clamp fitting — Cat. No. HX 078
stainless steel, with Teflon pressure ring
for Pt 100 resistance thermometer 4 mm dia.
Fig 5

Fig. 1

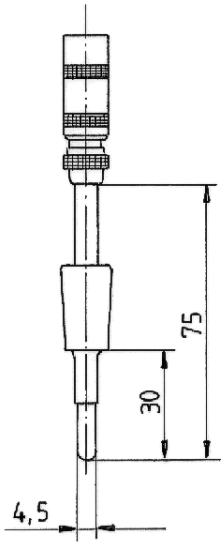

Pt 100-42

Fig. 2

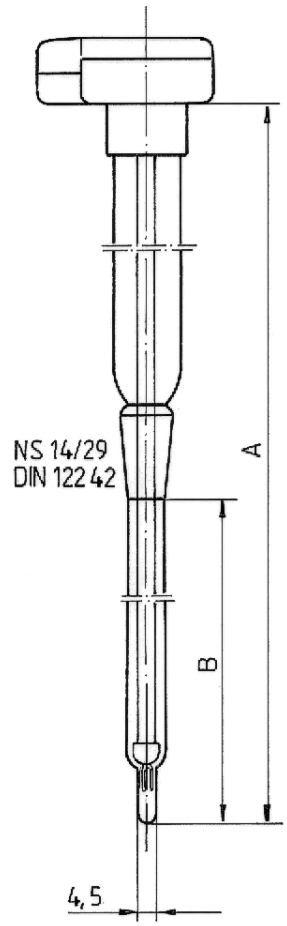

	A	B
Pt 100-44	300	135
Pt 100-66	410	245

Fig. 3

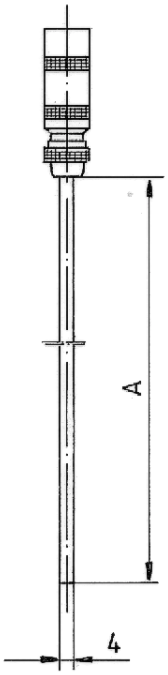

	A
Pt 100-90	80
Pt 100-70	250

Fig. 4

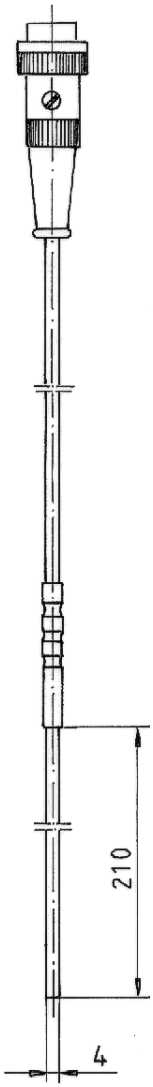

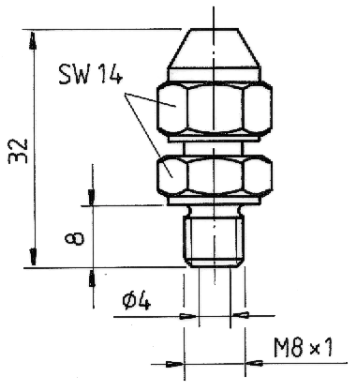

Fig. 5

Für diese Zeichnung behalten wir uns alle nicht ausdrücklich einerÄunten Nutzungsrechte einschließlich der Vervielfältigung und Weitergabe an Dritte vor. Technische Änderungen vorbehalten

X30 Netzspannung	100V	230V
100V	X	
115V	X	
230V		X

X31.X32	AC	DC
CxP.KxP	X	
DxP.DLxP	X	
RCxP.RKxP	X	
RLxP.RUL80		X
RUKxx		X
R400P	X	
R403PL.R406PL	X	

A5

Ti 100,00 °C

Ts 100,00 °C

A4

A3

A1

A2

R403PL
R406PL
H1

Anschlußbelegung
53 S
RS 232

12N
Alarm
OUT

14N
Alarm
IN

525
Analog
Ein/Aussang

Aussang Kanal 2
Aussang Kanal 1
GND
0-10V Eingang
I-Aussang
0-24mA Eingang

ab Serienn. Y10...

| | | |

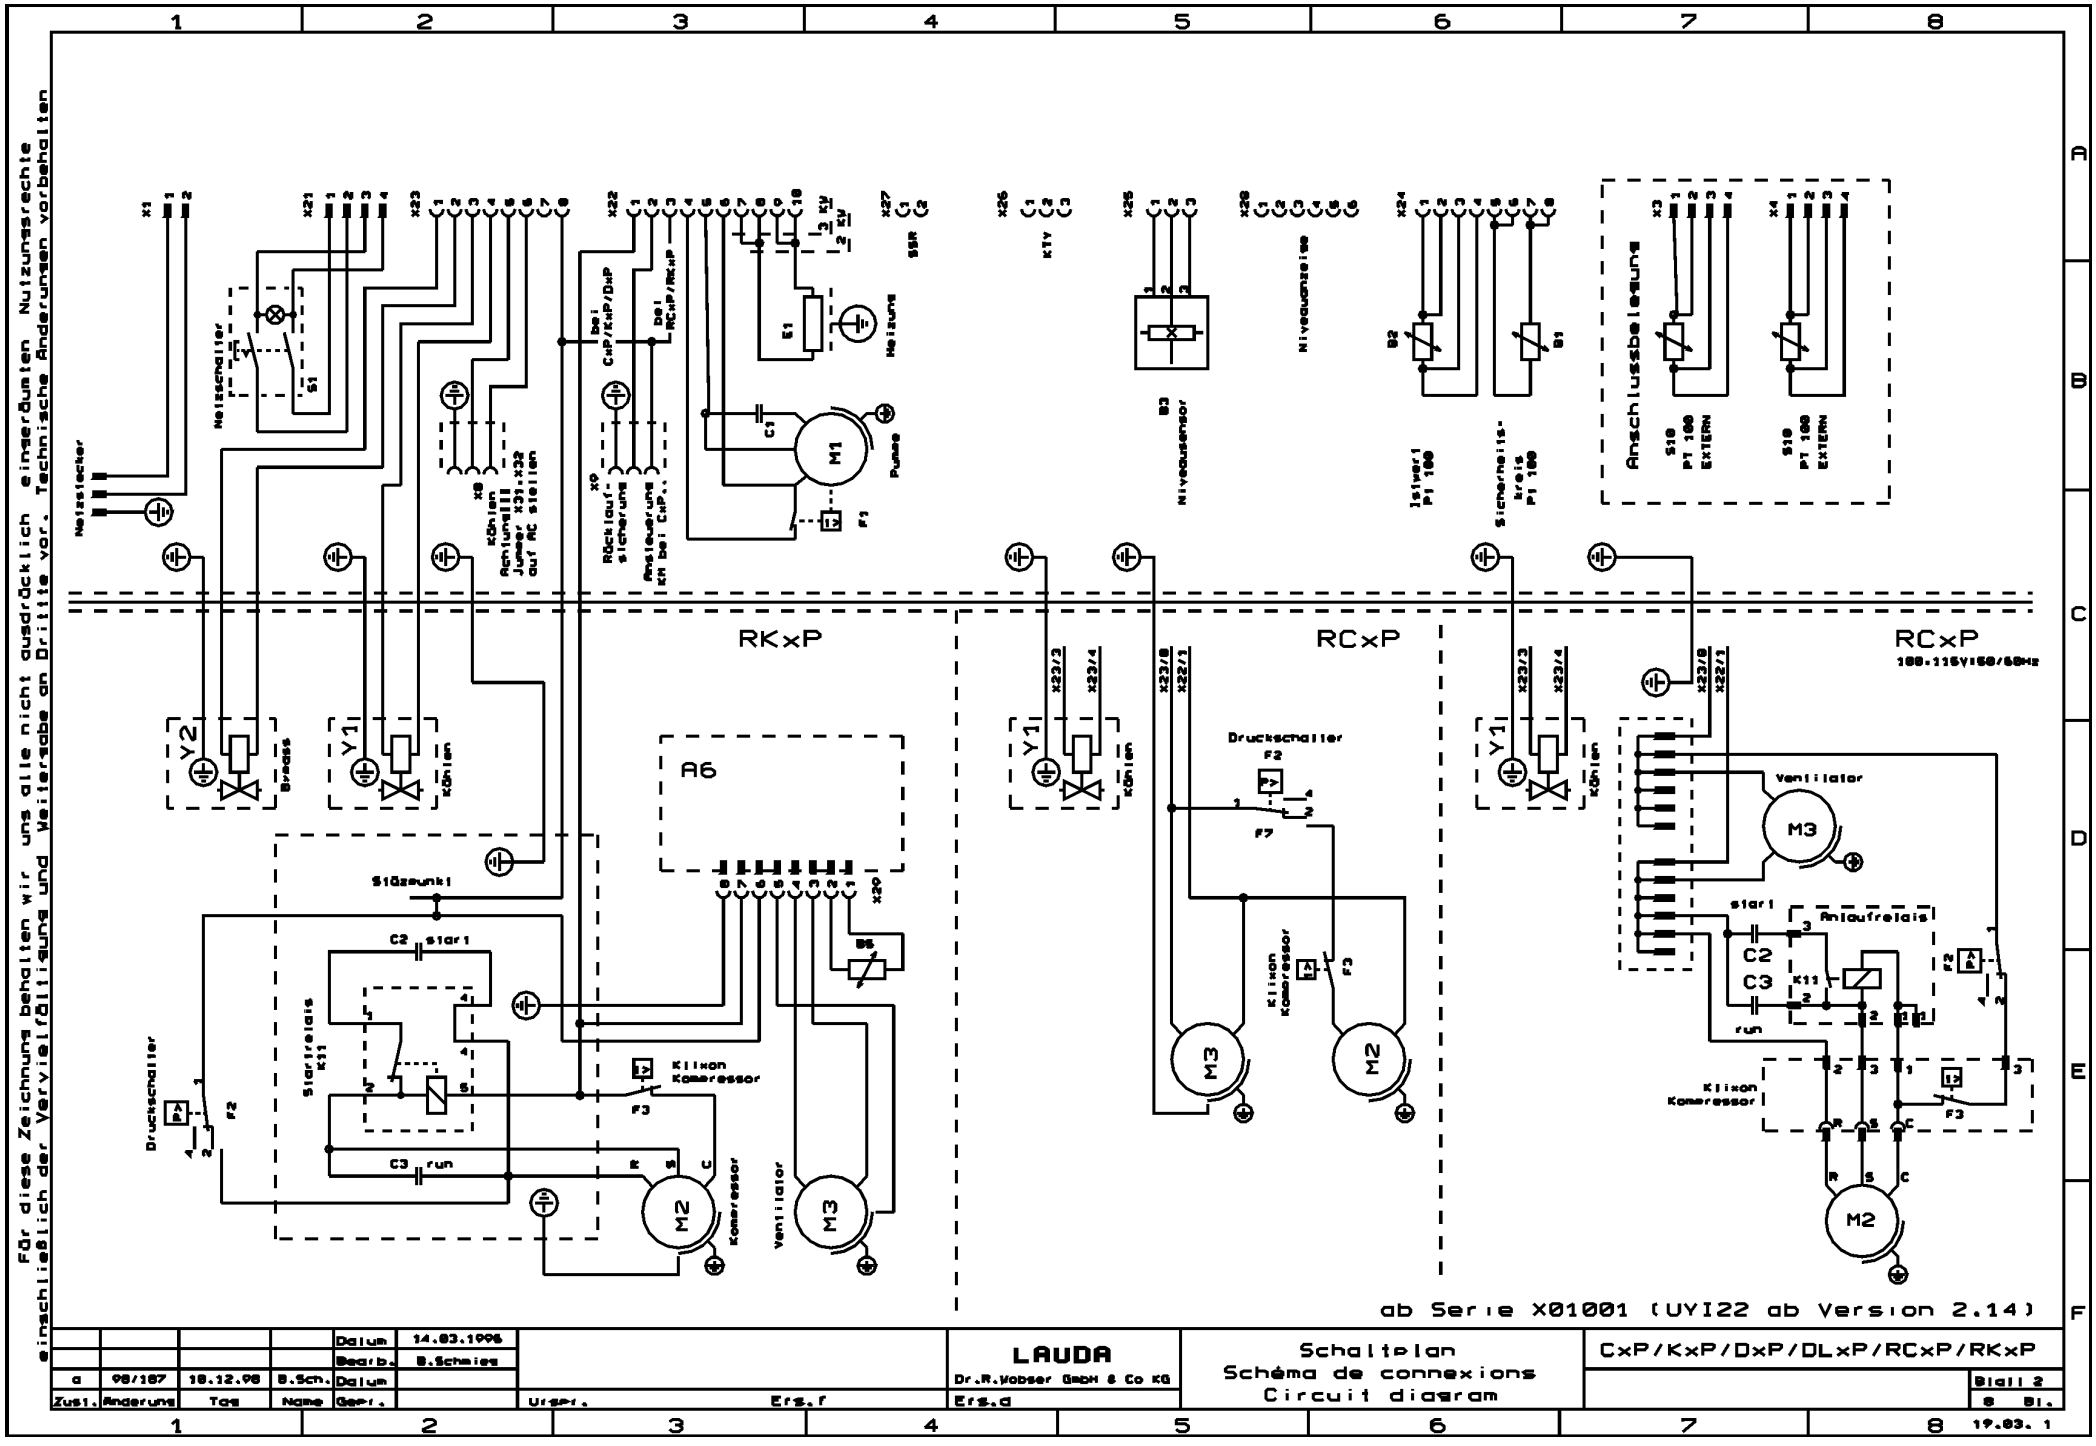
RKxP
RCxP
RCxP
A6
ab Serie X01001 (UYI22 ab Version 2.14)
LAUDA
Dr.R.Wobser GMBH & Co KG
Schaltplan
Schéma de connexions
Circuit diagram
CxP/KxP/DxP/DLxP/RCxP/RKxP
Blatt 2
Datum 14.03.1996
Bearb. B.Schmies
Ers.d
Ers.f
19.03.1

Für diese Zeichnung behalten wir uns alle nicht ausdrücklich eingeräumten Nutzungsrechte einschließlich der Vervielfältigung und Weitergabe an Dritte vor. Technische Änderungen vorbehalten

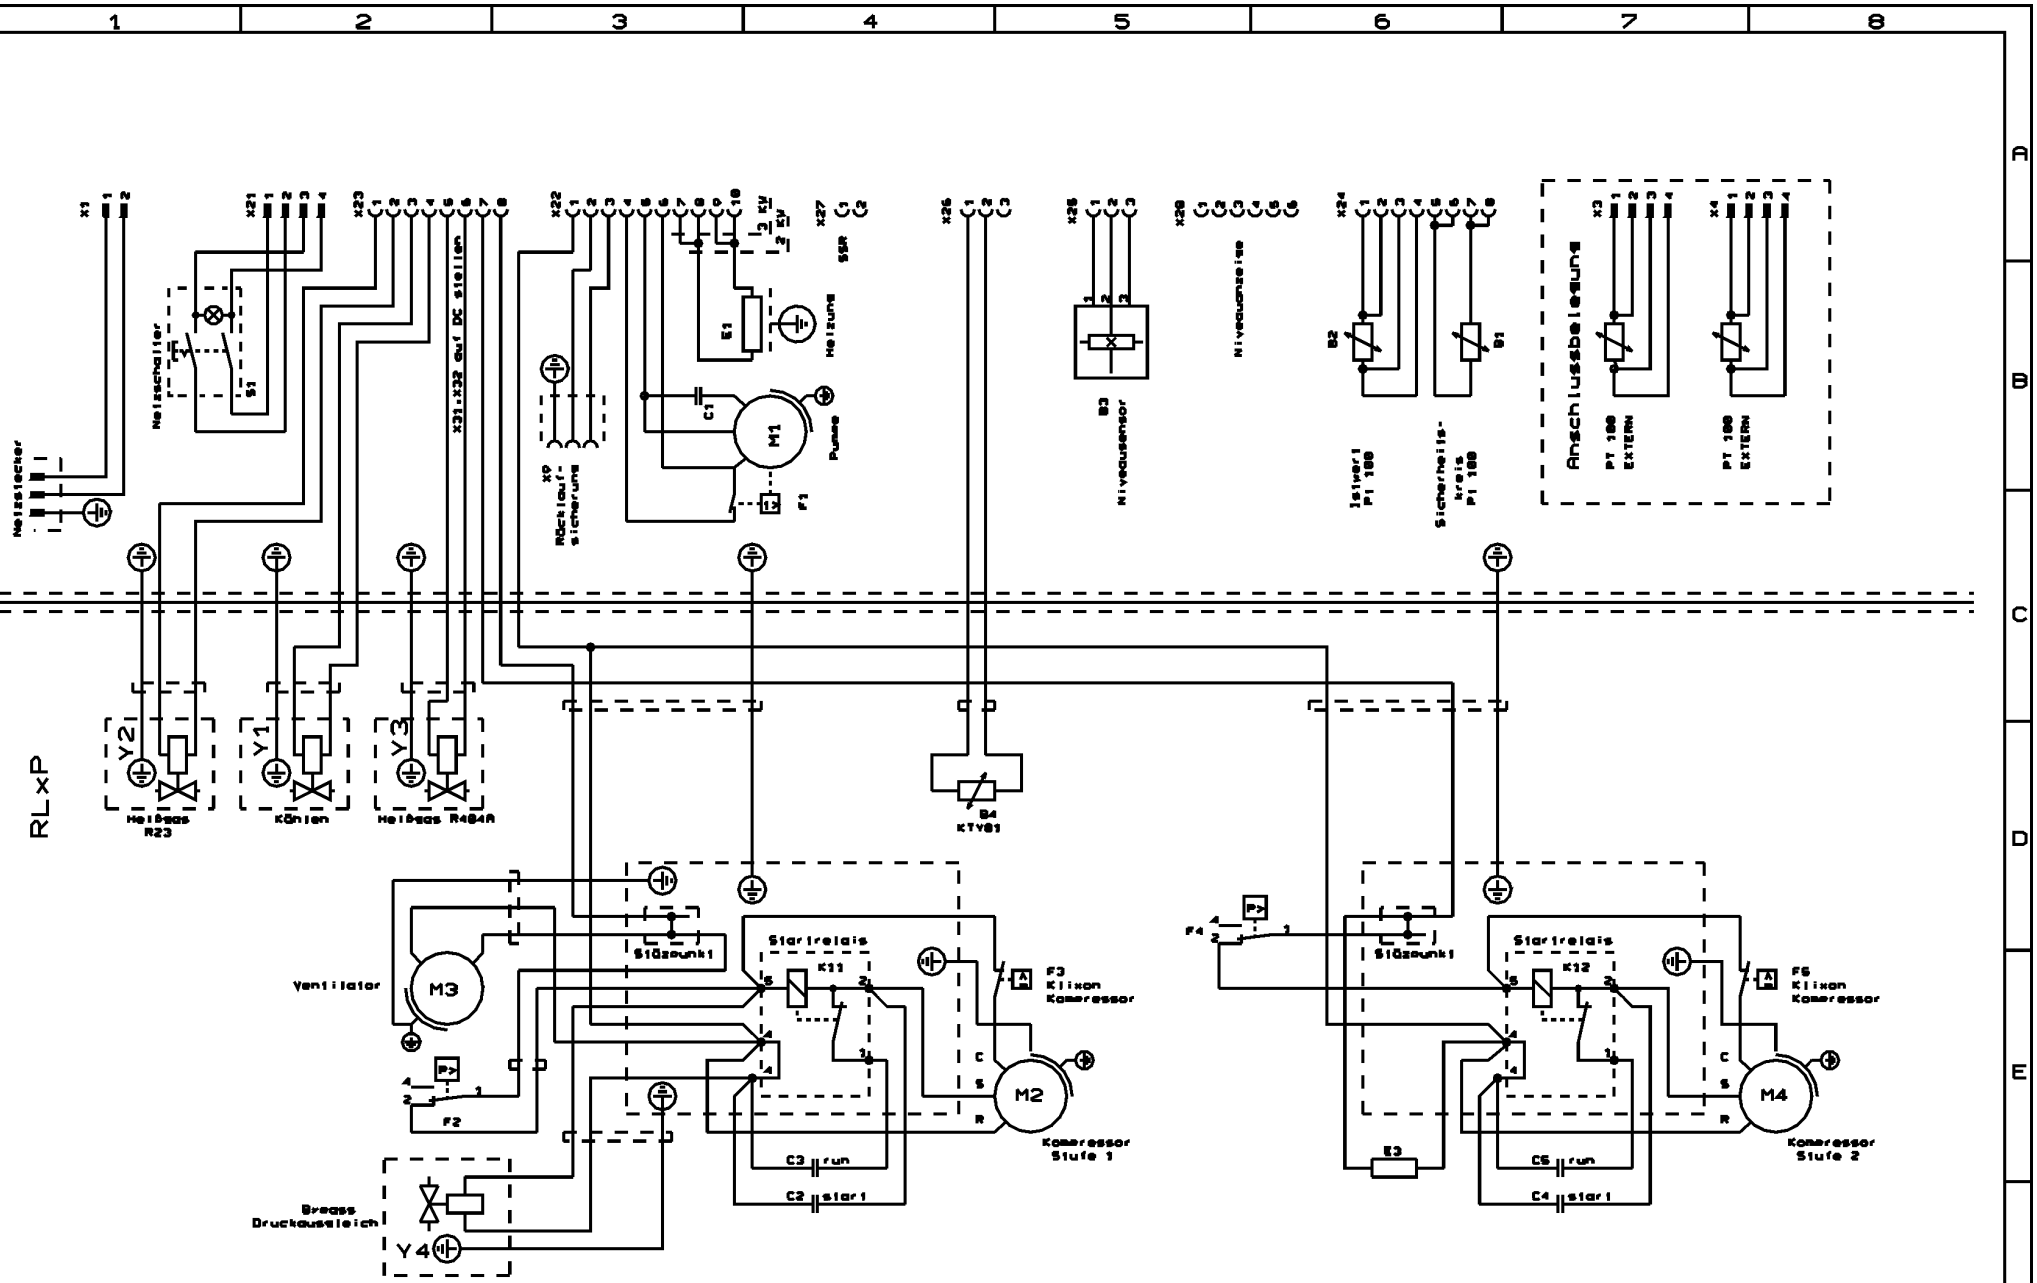

				Datum	27.07.1995	LAUDA Dr.R.Wobser GmbH & Co KG	Schaltplan Schéma de connexions Circuit diagram	RLxP	
				Bearb.	B.Schmies				
				Datum					
Zust.	Änderung	Tag	Name	Gepr.		Urspr.	Ers.f	Ers.d	Blatt 3 von 8 Bl.

19.03.1

Geräteliste Schaltplan
List of parts Circuit diagram
Liste de pièces schéma de connexions
230V; 50Hz / 230V; 60Hz

			RC 6 CP	RC 20 CP	RC 25 CP
A	1	Leiterplatte „MP Netz“ Printed circuit board „MP-Mains“ Circuit imprimé „MP-Secteur“	UL 382-1B	UL 382-1B	UL 382-1B
A	2	Leiterplatte „CPU“ Printed circuit board „CPU“ Circuit imprimé „CPU“	UL 383-1A	UL 383-1A	UL 383-1A
A	3	Leiterplatte „Anzeige Tastatur“ Printed circuit board „Indication Keyboard“ Circuit imprimé „Affichage Clavier“	UL 384-1	UL 384-1	UL 384-1
A	4	Leiterplatte „Analog Ausgang“ Printed circuit board „Analog exit“ Circuit imprimé „Sortie analogue“	UL 385-1	UL 385-1	UL 385-1
A	5	Leiterplatte „Anzeige Display“ Printed circuit board „Indication Display“ Circuit imprimé „Affichage Dsiplay“	EAO 091	EAO 091	EAO 091
B	1	Pt 100 Fühler Sicherheitskreis Pt 100 Probe Safety circuit Pt 100 Sonde Circuit securité	US 060 (ETP 046)	US 060 (ETP 046)	US 060 (ETP 046)
B	2	Pt 100 Fühler Reglung Pt 100 Probe Controller Pt 100 Sonde Réglage			
B	3	Niveausensor Level sensor Niveau sensor	EKS 034	EKS 034	EKS 034
C	1	Motorkondensator Motor condenser Condensateur moteur	1,5 uF ECA 012	1,5 uF ECA 012	1,5 uF ECA 012
E	1	Heizkörper Heater Corps de chauffe	2kW EH 162	2kW EH 162	2kW EH 162
F	1	Übertemperaturschutz (Umwälzpumpe) Overtemperature protection (Circulating pump) Protection de surpression (Pompe de circulation)	Intern	Intern	Intern
F	2	Überdruckschalter Stufe 1 Overpressure switch stage 1 Disjoncteur de surpréssion étage 1	ES 035	ES 035	ES 035
F	3	Übertemperaturschutz Stufe 1 Overtemperature protection stage 1 Protection de surpression étage 1	Intern	Intern	Intern
M	1	Umwälzpumpe Circulating pump Pompe de circulation	EM 093	EM 093	EM 093
M	2	Kompressor Stufe 1 Compressor stage 1 Compresseur étage 1	EMV 001	EMV 002	EMV 002
M	3	Ventilator Stufe 1 Fan stage 1 Ventilateur étage 1	EML 011	EML 011	EML 011
S	1	Netzschalter Mains switch Interrupteur secteur	EST 032	EST 032	EST 032
X	1	Netzanschluß / Netzkabel Mains connection / Mains cable Branchement secteur / Câble de secteur	EKN 008	EKN 008	EKN 008
X	9	Anschlußbuchse Rücklaufsicherung Connection socket Reflow security valve Douille de jonction Protection de refoulement	EQD 037+ EQZ 006	EQD 037+ EQZ 006	EQD 037+ EQZ 006
X	22	Steckleiste 10pol. Plug strip terminal Réglette à fiches mâles	EZK 056	EZK 056	EZK 056
X	23	Steckleiste 8pol. (Magnetventil) Plug strip terminal (Solenoid valve) Réglette à fiches mâles (Vanne solenoide)	EZK 057	EZK 057	EZK 057
Y	1	Magnetventil Kühlen Solenoid valve Cooling Vanne solenoide Réfroidissement	EVM 027	EVM 027	EVM 027

Geräteliste Schaltplan **List of parts Circuit diagram** **Liste de pièces schéma de connexions** **230V; 50Hz / 230V; 60Hz**			**RK 8 CP** **RK 8 KP**	**RK 20 KP**	**RL 6 CP**
A	1	Leiterplatte „MP Netz“ Printed circuit board „MP-Mains“ Circuit imprimé „MP-Secteur“	UL 382-1B	UL 382-1B	UL 382-1C
A	2	Leiterplatte „CPU“ Printed circuit board „CPU“ Circuit imprimé „CPU“	UL 383-1A	UL 383-1A	UL 383-1A
A	3	Leiterplatte „Anzeige Tastatur“ Printed circuit board „Indication Keyboard“ Circuit imprimé „Affichage Clavier“	UL 384-1	UL 384-1	UL 384-1
A	4	Leiterplatte „Analog Ausgang“ Printed circuit board „Analog exit“ Circuit imprimé „Sortie analogue“	UL 385-1	UL 385-1	UL 385-1
A	5	Leiterplatte „Anzeige Display“ Printed circuit board „Indication Display“ Circuit imprimé „Affichage Dsiplay“	EAO 091	EAO 091	EAO 091
A	6	Leiterplatte „Drehzahlregelung Lüftermotor“ Printed circuit board „Speed control Fan motor“ Circuit imprimé „Réglage de vitesse moteur ventilé“	UL 446	UL 446	
B	1	Pt 100 Fühler Sicherheitskreis Pt 100 Probe Safety circuit Pt 100 Sonde Circuit securité	US 060 (ETP 046)	US 060 (ETP 046)	ETP 047
B	2	Pt 100 Fühler Reglung Pt 100 Probe Controller Pt 100 Sonde Réglage			
B	3	Niveausensor Level sensor Niveau sensor	EKS 034	EKS 034	EKS 034
B	4	Fühler KTY 81 Probe KTY 81 Sonde KTY 81			ETP 027
B	5	Fühler für Drehzahlregleung Probe for speed control Sonde pour régulation de vitesse	US 041	US 041	
C	1	Motorkondensator Motor condenser Condensateur moteur	5 uF ECA 007	5 uF ECA 007	1,5 uF ECA 012
E	1	Heizkörper Heater Corps de chauffe	2 kW EH 149	2 kW EH 149	1,2 kW EH 163
E	3	Heizband Heater band Ruban de chauffe			UD 387
F	1	Übertemperaturschutz (Umwälzpumpe) Overtemperature protection (Circulating pump) Protection de surpression (Pompe de circulation)	Intern	Intern	Intern
F	2	Überdruckschalter Stufe 1 Overpressure switch stage 1 Disjoncteur de surpréssion étage 1	ES 035	ES 035	ES 035
F	3	Übertemperaturschutz Stufe 1 Overtemperature protection stage 1 Protection de surpression étage 1	Intern	Intern	Intern
F	4	Überdruckschalter Stufe 2 Overpressure switch stage 2 Disjoncteur de surpréssion étage 2			ES 035
F	5	Übertemperaturschutz Stufe 2 Overtemperature protection stage 2 Protection de surpression étage 2			Intern
K	11	Anlaufrelais (M2) Starting relay (M2) Relais de demarrage (M2)	Intern	Intern	Intern

Geräteliste Schaltplan **List parts Circuit diagram** **Liste de pièses schéma de connexions** **230V; 50Hz / 230V; 60Hz**		**RK 8 KP**	**RK 20 KP**	**RL 6 CP**
K 12	Anlaufrelais (M4) Starting relay (M4) Relais de demarrage (M4)			Intern
M 1	Umwälzpumpe Circulating pump Pompe de circulation	EM 094	EM 094	EM 093
M 2	Kompressor Stufe 1 Compressor stage 1 Compresseur étage 1	EMK 113	EMK 113	
M 3	Ventilator Stufe 1 Fan stage 1 Ventilateur étage 1			BKA 069*
M 4	Kompressor Stufe 2 Compressor stage 2 Compresseur étage 2			
S 1	Netzschalter Mains switch Interrupteur secteur	EST 032	EST 032	EST 032
X 1	Netzanschluß / Netzkabel Mains connection / Mains cable Branchement secteur / Câble de secteur	EKN 008	EKN 008	EKN 008
X 9	Anschlußbuchse Rücklaufsicherung Connection socket Reflow security valve Douille de jonction Protection de refoulement	EQD 037+ EQZ 006	EQD 037+ EQZ 006	EQD 037+ EQZ 006
X 22	Steckleiste 10pol. Plug strip terminal Réglette à fiches mâles	EZK 056	EZK 056	EZK 056
X 23	Steckleiste 8pol. (Magnetventil) Plug strip terminal (Solenoid valve) Réglette à fiches mâles (Vanne solenoide)	EZK 057	EZK 057	EZK 057
X 29	Steckleiste 8pol. (Drehzahlregelung) Plug strip terminal (speed control) Réglette à fiches mâles (Régulation de vitesse)	EZK 057	EZK 057	EZK 057
Y 1	Magnetventil Kühlen Solenoid valve Cooling Vanne solenoide Réfroidissement	EVM 027	EVM 027	(EVM 027)*
Y 2	Magnetventil Bypass Solenoid valve Bypass Vanne solenoide Bypass	EVM 027	EVM 027	(EVM 027)*
Y 3	Magnetventil Heißgas R 404 A Solenoid valve Hot gas Vanne solenoide gaz chaud			(EVM 012)* EVM 064

Notes for trouble-shooting for LAUDA Thermostats with P - electronics

Each repair requiring the opening of the control part by means of tools and each work at the electronic part may only be done by a trained technician !

Malfunction	Fault	Reason	Remedy
Green signal lamp of mains switch not alight	Control fuse has actuated		Replace fuse on PCB ”MP Mains” 5 x 20; F4A
		Overload on PCB	Replace PCB ” MP Mains ”
Display: ”Level too low ”	Bath level too low	Evaporation; external consuming device not refilled	Fill in bath liquid; press reset button twice
		Leakage in hose connections	Check hoses and their connection; if necessary replace them; fill in bath liquid; press reset button twice
	Level detector		Check level detector, plugs and hall sensors; if necessary replace them; check their function carefully For USH 400(/6) fill in bath liquid up to the level mark
Display: ” Temperature too high ”	Temperature probe	Temperature difference between two probes > 15°C	Replace bath temperature probe (double Pt 100). For USH 400(/6) please check both single Pt 100.
	Temperature of bath liquid above over-temperature switch-off point (To)	Overtemperature switch-off point (To) set too low	Press reset button; adjust overtemp. switch-off point (To) at an higher value; press reset button
		Triac or triggering	Replace triac or PCB "MP Mains"
Display: ” External fault "	Contact input 14 N ”Fault ” is used	Pins ½ not connected	Reason for malfunction caused by external system
		No signal transmitter connected to socket 14 N, though selection at PAR level is activated	Switch off function ” Contact input Fault ” at PAR level; see operating instructions
Display: ” Ts > To	Wrong inputs	Setpoint adjusted above overtemperature switch-off point (To)	Adjust overtemperature switch-off point (To) at an higher temperature; pay attention to bath liquid, flash point etc. !!
		Overtemperature switch-off point adjusted below setpoint (Ts)	First adjust setpoint (Ts) at a lower value then set requested overtemperature switch-off point
Display: “Ts < Tu”	Wrong input	Setpoint adjusted below low-temperature switch-off point (Tu)	Adjust low-temperature switch-off point (Tu) at a lower value
		Low-temperature switch-off point adjusted above setpoint (Ts)	First adjust setpoint at an higher temperature then set requested low-temperature switch-off point (Tu)

Notes for trouble-shooting for LAUDA Thermostats with P - electronics

Malfunction	Fault	Reason	Remedy
Setpoint Ts is not adjustable but will disappear	Operating error	Setpoint is determined by the analogue input; see right side of display L2: A	Switch off analogue input
Sound signal appears when a button is pressed		Another function blocks the keybord e.g.: programme runs; RS 232 active; Parameter etc.	Leave the function or press ESC (RS 232) (R appears on the right side of display L2); Stop access and press the button “Local”
Display: ”Tu – Cursor flashes” acoustic signal switches compressor off after 1 min.	Wrong input	Actual value is ≤ = Tu, resp. setpoint adjusted too close to low-temperature switch-off point Tu; bath temperature (Ti) falls below Tu	Set low-temperature switch-off point (Tu) at a lower value
Display ”Out of range”	Wrong input	Tried to enter values being out of admissible ranges; Ts,To,Tu being out of operating temp.	Choose the right values taking into consideration their limitations; check bath liquid or configuration after having switched on the unit
		Programme input out of operating temperature range of the unit	Enter admissible values
		Value for Xp, Tn, Tv above 199,9	Enter admissible values
Tu or To is not adjustable; “Out of range ”		Input values are outside of temperature limits of the type of unit or initialization does not fit to the type of unit	Reinitialize type of unit: (see operating instructions “Maintenance”); may also return ***Default-values***
Display: “TA” (only for USH 400(/6)		Motor chamber temperature > 55 °C	Surrounding temperature of the part of the thermostat may be too high (see operating instructions 5.2.8)
Display: ↓ (only for USH 400(/6) RUL and RUK)		Level too low	Fill in bath liquid ; (see operating instructions 5.2.3)
Display: ↑ (only for USH 400(/6) RUL and RUK)		Level in the vessel is close to overflow; heater switches off	Either reduce the amount of thermal liquid or install an other vessel Attention: HOT !!!
Display: “Upper limitation of oil > limitation of unit” (cancelled beginning with software version 1.06)		Admissible working temperature range of bath liquid exceeds operating temperature range of the unit	Bath liquid is accepted, no other steps necessary; unit limitations valid
Setpoint cannot be selected by means of keyboard		Check setpoint selection; see right side of display L2; P=Programme; A=Analogue; R=RS 232	Switch setpoint selection to I=Internal
Display: “External fault – clock stop!”	Clock does not run	RAM defective	Unit has to be switched on once again; set date and time once again; see operating instructions if necessary replace RAM

Notes for trouble-shooting for LAUDA Thermostats with P - electronics

Malfunction	Fault	Reason	Remedy
Display: "Internal Pt 100 defective"	Double Pt 100 for bath temperature or safety temperature	Interruption, short circuit or temperature deviation of bath temperature probes too important	Replace double Pt 100 for bath temperature For USH 400(/6) please check both single Pt 100
Display: "Ext. Pt 100 not connected"		Tried to switch over to external control without connecting an external Pt 100	Continue to work with internal control or connect external Pt 100 for T1 or T2; look at display for control variables I, 1 or 2; check display for T1 or T2
		Tried to calibrate Pt 100 being not connected	
Display: "Correcting value too high"	Important deviation of Pt 100 from standard values	Value input differing from the basic value that is indicated by more than 5 K	Check temperature reference thermometer, check Pt 100; replace PCB "CPU"
Scale of analogue outputs shows discrepancies		Outputs not correctly calibrated	Calibrate the analogue output channels (see operating instructions)
Unit does not heat though heating is indicated	Triac		Replace triac
	Heater	Defective	Replace heater
		Interruption	Eliminate
		Electronics	Replace PCB "MP Mains"
		Controller output limitation at PAR level too small	Enter higher values at PAR level (e.g. 100 %)
Pump does not run	Temperature safety cut-out in pump has actuated Pump stops	Motor blocked	Turn propeller of motor; if necessary replace it; clean pump
		Viscosity of bath liquid too high	Use other bath liquid; wait until motor has cooled down
Bath temperature rises clearly above adjusted setpoint (Ts) Heating indication ON		Controller	Replace PCB "MP Mains" or PCB " CPU "
Heating indication OFF		Triac	Replace triac
Temperature rises slowly above adjusted setpoint Heating indication OFF	Cooling not sufficient	Heat emission of pump	Connect cooling water supply or other kind of cooling
Display shows wrong temperature (Ti, T1, T2)		Temperature probe	Replace double Pt 100 or external Pt 100 T1, T2
Display is dark	Temperature cut-out in transformer has actuated	Overload caused by short – circuit	Replace PCBs or control unit

Notes for trouble-shooting for LAUDA Thermostats with P - electronics

Malfunction	Fault	Reason	Remedy
Unit does not work at adjusted setpoint		Wrong control parameters adjusted	Enter new values or start autoadaption
Temperature control by means of external controller not stable		Thermal contact of bath liquid and external measuring point not sufficient	Improve circulation through external consuming device or thermal contact to ext. Pt 100
Unit does not cool down		Controller output limitation at PAR level too small	Adjust higher value at PAR level (e.g. -100 %)
	Compressor defective		Replace refrigeration unit – by refrigeration engineer !!
	Leakage in refrigeration system		Clear leakage, fill in refrigerant – by refrigeration engineer !!
	Compressor does not run	Compressor without tension	Eliminate line interruption
		Triggering defective	Replace PCB ”MP Mains ”
Unit does not cool down	Compressor does not run	Pressure switch has actuated	Unscrew grid, clean condenser, blow through compressed air, improve ventilation
	Solenoid valves do not work correctly	Triggering defective	Replace PCB ” MP Mains ”
Compressor switches ON and OFF in regular periods; temperature constancy very bad	Condensation pressure too high	Fan defective	Replace fan motor
		Fan speed (only RK)	Check speed or speed controller
	Condenser dirty	Dust	Unscrew grid, from the back side blow compressed air or nitrogen through condenser
		Ventilation disturbed	Enlarge distance to nearby units or walls
		Ambient temperature too high	Air the room
Insufficient cooling in the lower temperature range		Bath liquid contaminated by condensate	Replace bath liquid to suit bath temperature
	Cools down to approx. 0°C only	Bath liquid not suitable (water)	Use water/ glycol mixture

BESTÄTIGUNG / CONFIRMATION / CONFIRMATION

An / To / A:
LAUDA Dr. R. Wobser • LAUDA Service Center • Fax: +49 (0) 9343 - 503-222

Von / From / De :

Firma / Company / Entreprise: _____

Straße / Street / Rue: _____

Ort / City / Ville: _____

Tel.: _____

Fax: _____

Betreiber / Responsible person / Personne responsable: _____

Hiermit bestätigen wir, daß nachfolgend aufgeführtes LAUDA-Gerät (Daten vom Typenschild):
We herewith confirm that the following LAUDA-equipment (see label):
Par la présente nous confirmons que l'appareil LAUDA (voir plaque signalétique):

Typ / Type / Type :	**Serien-Nr. / Serial no. / No. de série:**

mit folgendem Medium betrieben wurde
was used with the below mentioned media
a été utilisé avec le liquide suivant

_____

_____

_____

_____

Darüber hinaus bestätigen wir, daß das oben aufgeführte Gerät sorgfältig gereinigt wurde, die Anschlüsse verschlossen sind, und sich weder giftige, aggressive, radioaktive noch andere gefährliche Medien in dem Gerät befinden.

Additionally we confirm that the above mentioned equipment has been cleaned, that all connectors are closed and that there are no poisonous, aggressive, radioactive or other dangerous media inside the equipment.

D'autre part, nous confirmons que l'appareil mentionné ci-dessus a été nettoyé correctement, que les tubulures sont fermées et qu'il n'y a aucun produit toxique, agressif, radioactif ou autre produit nocif ou dangeureux dans la cuve.

Stempel **Seal / Cachet.**	**Datum** **Date / Date**	**Betreiber** **Responsible person / Personne responsable**

LAUDA DR. R. WOBSER GmbH & Co. KG
Pfarrstraße 41/43
D - 97922 Lauda-Königshofen
Internet: http://www.lauda.de
Tel: +49 (0)9343 / 503-0
Fax: +49 (0)9343 / 503-222
E-mail: info@lauda.de